

FC1 FC1

# **INSTALLATION INSTRUCTIONS COMMERCIAL KEY-IN-LEVER**

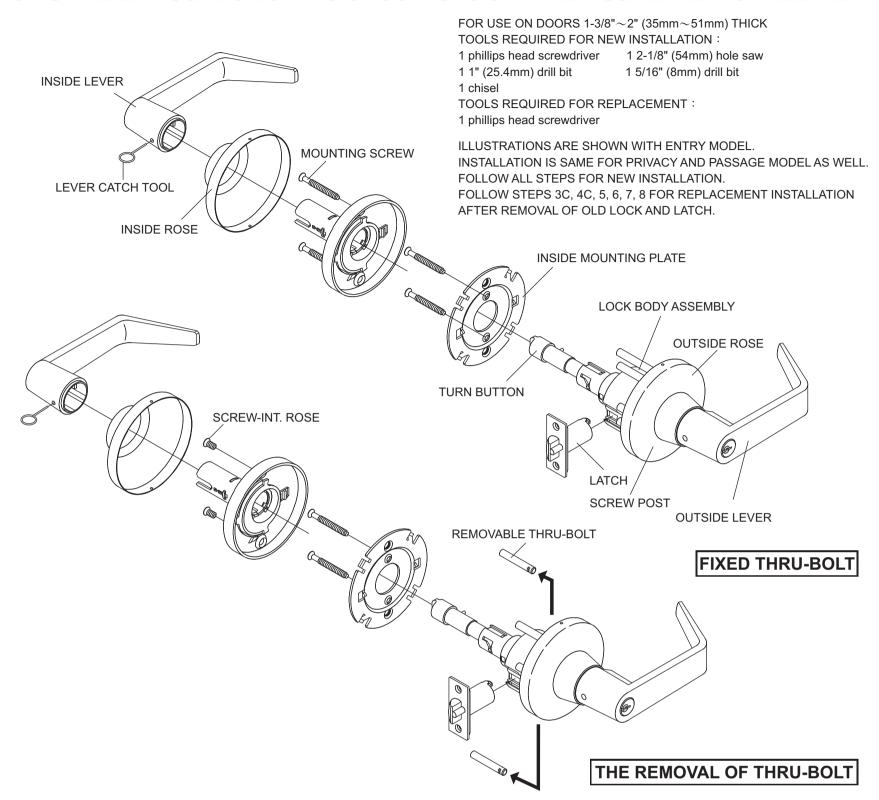

#### 1. MARK DOOR

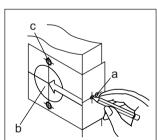


- a. Start 38" from floor and mark center of door edge.
- b. Select backset 2-3/8" or 2-3/4" and mark hole center on door face.

NOTE ·· BACKSET ON DOOR FACE MUST BE SAME AS BACKSET OF YOUR LOCK.

c. Mark two holes for screw post.


### 2. DRILL HOLES

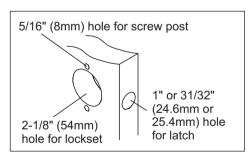

Drill holes as marked.

NOTE:
DRILL 2-1/8" (54mm) HOLE
FROM BOTH SIDES TO AVOID
SPLITTING WOOD.


## 3. INSTALL LATCH

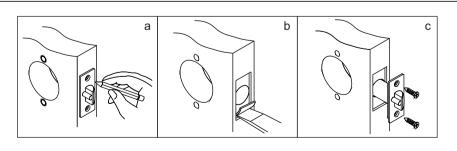



- a. Insert latch in hole and keep it parallel to door face.
   Mark outline and remove latch.
- b. Chisel 11/64" ( $4\sim4.3$ mm) deep or until faceplate flush with door edge.
- c. Insert latch and tighten screws.

NOTE ·· LATCHBOLT BEVEL MUST FACE TO CLOSING DIRECTION.

#### 4. INSTALL STRIKE

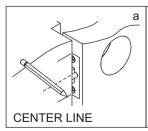

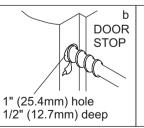

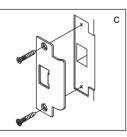


- a. Close door to mark horizontal line of strike.
- b. Measure one half of door thickness from door stop to mark vertical center line of strike. Drill 1" (25.4mm) hole, 1/2" (12.7mm) deep at intersection of horizontal and vertical center lines.
- c. Cut out jamb 3/32" (2.4mm) deep or until strike flush with jamb. Tighten screws securely.


FC1 FC1

FC1 FC1

#### **5. REMOVE INSIDE TRIM**


Use lever catch tool to depress lever catch visible under hole of inside lever shank and slide off inside lever, rose liner and mounting plate.

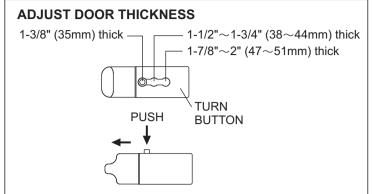

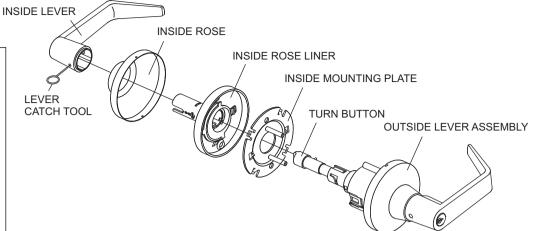

#### 6. ADJUST DOOR THICKNESS


- a. Remove outside mounting plate toward cylindrical case.
- b. Put the catch tool into the allocated position of outside mounting plate as the illustrating bellow.
- c. Rotate outside mounting plate to required door thickness by using a catch tool.

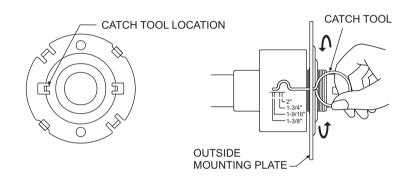

#### 7. INSTALL OUTSIDE LEVER ASSEMBLY


Install outside lever assembly on the door.

Make sure tail of latch is engaging with retractor correctly as illustrated.

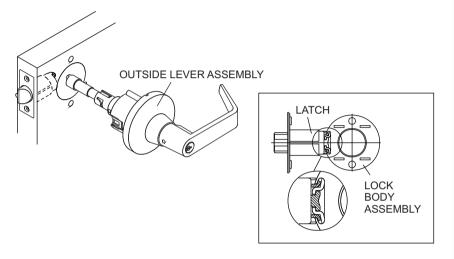


# 8. INSTALL INSIDE MOUNTING PLATE AND ROSE LINER


- a. Install inside mounting plate to lock body.
- b. Press inside rose liner onto mounting plate and tighten mounting screws securely.

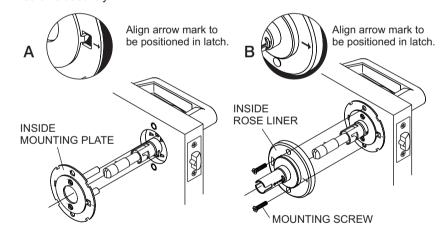

#### 9. INSTALL INSIDE ROSE AND LEVER

- a. Be sure to fit rose in recess of rose liner.
- b. Depress lever catch with tool provided.
   Push inside lever on completely until catch engages in lever.
   Confirm lever is secured.

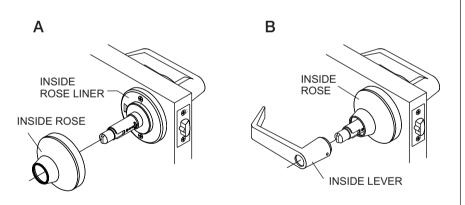

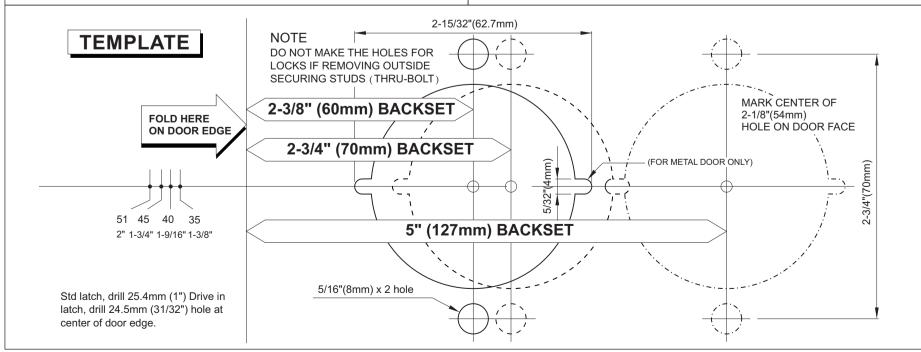

FC1 FC1