

ADDENDUM

ADDITIONAL INFORMATION FOR CHANGING, ADDING, and DELETING THE MASTER and SUB-MASTER CODE

CHANGING THE MASTER CODE: PROGRAM 991

Assuming that the current Master Code is (1) (2) (3) (4) (5) and you want to change it to (4) (4) (4) (4) (4):

[Current Master Code] (#) (9) (9) (1) [Length of new Master Code][New Master Code]
[Length of new Master Code][New Master Code]

EXAMPLE:

Assuming that the current Master Code is (1) (2) (3) (4) (5) and you want to change it to (4) (4) (4) (4) (4).

1. Press (1) (2) (3) (4) (5) • (#) (9) (9) (1) • (5) • (4) (4) (4) (4) (4) • (5) • (4) (4) (4) (4) (4)
2. Wait for at least 5 seconds before trying your new Master Code.

Note: The BLUE DOTS (•) indicates the flashing BLUE LED on the unit.

The unit will unlock upon entering the Master Code and will remain unlocked while initiating the program sequence.

Once the number of digits is selected, it cannot be changed unless unit is reverted back to its factory default settings.

ADD/CHANGE SUB-MASTER CODE: PROGRAM 981

[Current Master Code] (#) (9) (8) (1) [New Sub-Master Code][New Sub-Master Code]

EXAMPLE:

Assuming that the current Master Code is (1) (2) (3) (4) (5) and you want to add a Sub-Master Code of (2) (3) (4) (5) (6).

1. Press (1) (2) (3) (4) (5) • (#) (9) (8) (1) • (2) (3) (4) (5) (6) • (2) (3) (4) (5) (6) ••
2. The unit will unlock upon entering the Master Code and will remain unlocked while initiating the program sequence.
3. Wait for at least 5 seconds before trying your new Sub-Master Code.

DELETING SUB-MASTER CODE: PROGRAM 982

Assuming that the current Master Code is (1) (2) (3) (4) (5) and you want to delete a Sub-Master Code.

[Current Master Code] • (#) (9) (8) (2) • (9) (8) (2) ••

1. Press (1) (2) (3) (4) (5) • (#) (9) (8) (2) • (9) (8) (2) ••
2. Sub-Master Code is deleted.