


## PD96 Components List


	Part Lists	10	40	50	53	60	70	80	90	92	95
A	X Series Trim	1EA									
B	Cylinder & Keys	-	-	1EA	1EA	-	1EA	1EA	-	-	1EA
C	Thumbturn	-	1EA	1EA	1EA	1EA	-	-	-	-	-
D	Coin Turn	-	1EA	-	-	-	-	-	-	-	-
E	Mortise Lock & Faceplate	1EA									
F	Strike Plate w/ Dust Box	1EA									

A		 5* - Compression Inserts  2 - M4x1-3/8" (35mm) Machine Screw  2 - Safety Lock Washer  2 - M4.2x19mm Self Tapping Screw  1 - 3mm Allen Key
B		 1 - Wave Washer
C		 4 - M4x19mm Self Tapping Screw  4 - M4x19mm Wood Screw  1 - 3mm Allen Key
D		 8 - M4x19mm Self Tapping Screws  8 - M4x19mm Wood Screw  1 - 3mm Allen Key
E		 2 - M4x30mm Combo Screw  3 - M4x6mm Machine Screw
F		 2 - M4x30mm Combo Screw

\* Extra fasteners provided for convenience

## Installation Instructions

### PD96 Self-Latching Mortise Lockset for Sliding Door with X Series Trim

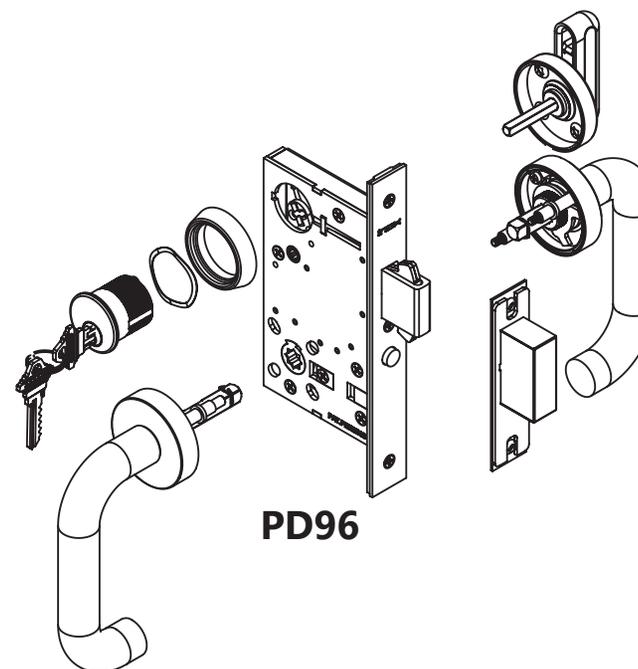


**This product has been tested and certified for UL1784.**


It is intended to be installed in accordance with the installation wiring diagram, mechanical assembly drawings provided with each product, the local authority having jurisdiction (AHJ) and the National Electric Code, NFPA 70. When installed in fail secure mode, the local authority shall be consulted with regard to the use of possible panic hardware to allow emergency exit from the secure area.

## Installation Instructions for Passage Function: PD9610 with X Series Trim

## Installation Instructions for Privacy Function: PD9640 with X Series Trim

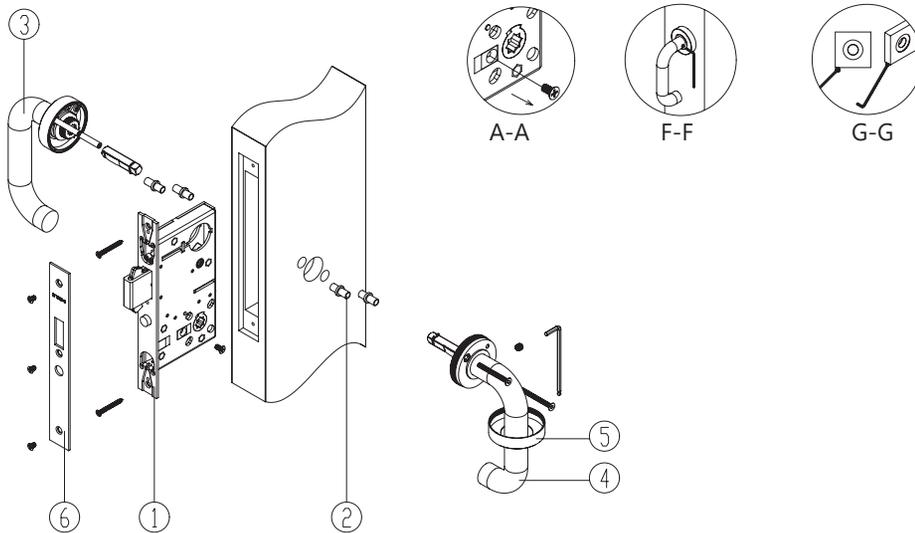


1. Install mortise lockcase in door prep. **NOTE:** Make sure handing screws from both sides of the lockcase has been removed. See Section A-A.
2. Install the compression inserts on both sides.
3. Install outside X series trim. Do not tighten the set screws.
4. Install inside X series trim and tighten the M4x1-3/8" screws.
5. Install the inside rose cover. XGT is threaded, XGS requires a set screw.  
**NOTE:** After the lever is installed, fully tighten the set screws for both inside and outside trims. See Section F-F. **NOTE:** For XGS square rose, ensure that the rose is aligned prior to tighten the set screw. See Section G-G.
6. Install armored faceplate with M4x6mm screws.

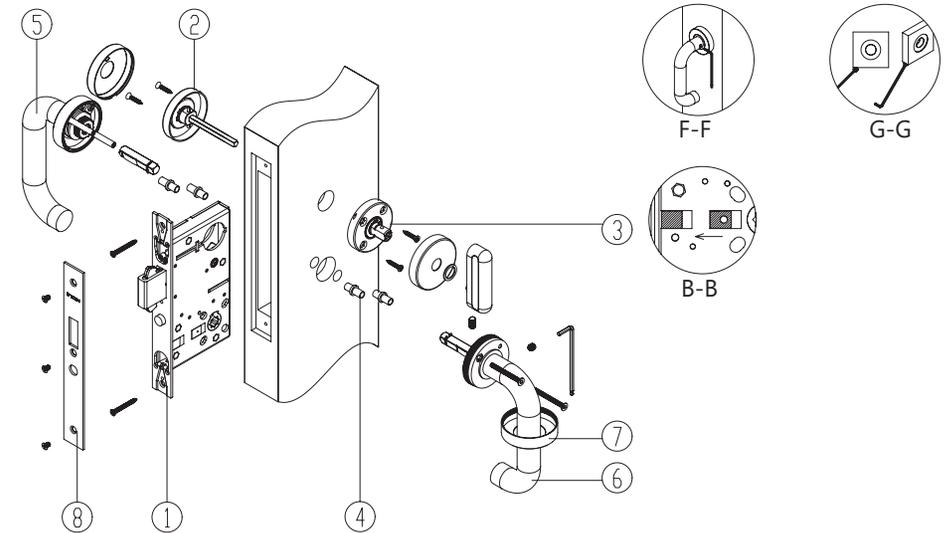


1. Install mortise lockcase in door prep. **NOTE:** Make sure the Entry locking block has been set to the B-B end direction.
2. Install outside thumbturn release sub-rose and tighten screws.
3. Mount inside privacy thumbturn rose with M4x#6 screws. Mount rose cover and clear washer before mounting thumbturn piece. Use Allen Key to tighten set screws. Mount the outside thumbturn release rose cover.
4. Install the compression inserts on both sides.
5. Install outside X series trim. Do not tighten the set screws.
6. Install inside X series trim and tighten the M4x1-3/8" screws.
7. Install the inside rose cover. XGT is threaded, XGS requires a set screw.  
**NOTE:** After the lever is installed, fully tighten the set screws for both inside and outside trims. See Section F-F. **NOTE:** For XGS square rose, ensure that the rose is aligned prior to tighten the set screw. See Section G-G.
8. Install armored faceplate with M4x6mm screws.

## Installation Instructions for Inner Entry Function: PD9650 with X Series Trim

## Installation Instructions for Entrance Function: PD9653 with X Series Trim

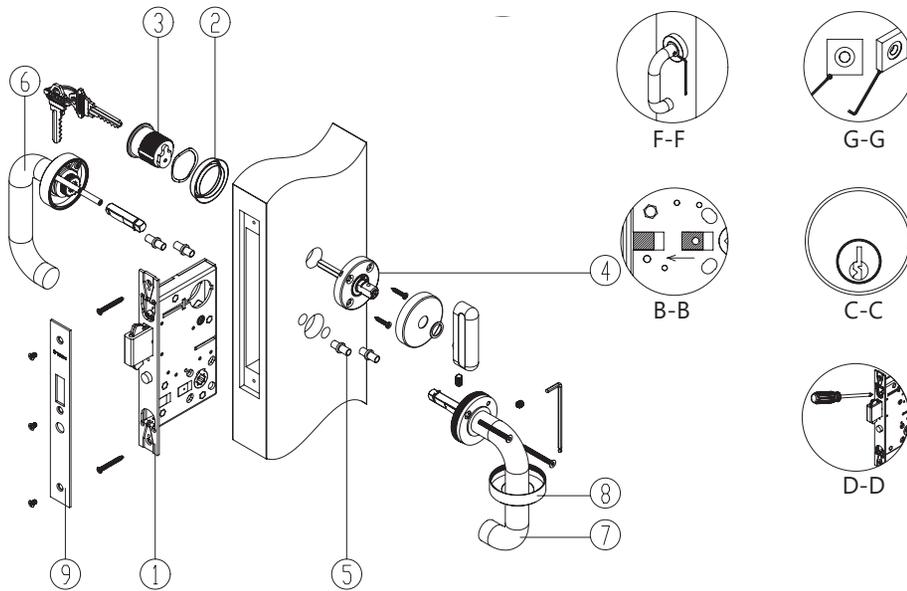


1. Install mortise lockcase in door prep. **NOTE:** DO NOT tighten the faceplate screws until the cylinder has been installed. **NOTE:** Make sure the Entry locking block has been set to the B-B end direction.
2. Screw on outside cylinder escutcheon ring with spacer.
3. Install mortise cylinder. **NOTE:** Key slot on cylinder should be on lower center position. See section C-C. Using a screwdriver, tighten the M4.2x19mm screws on the lockcase to position the cylinder into place. See Section D-D.
4. Mount inside privacy thumbturn rose with M4x6mm screws. Mount rose cover and clear washer before mounting thumbturn piece. Use Allen Key to tighten set screws.
5. Install the compression inserts on both sides.
6. Install outside X series trim. Do not tighten the set screws.
7. Install inside X series trim and tighten the M4x1-3/8" screws.
8. Install the inside rose cover. XGT is threaded, XGS requires a set screw.  
**NOTE:** After the lever is installed, fully tighten the set screws for both inside and outside trims. See Section F-F. **NOTE:** For XGS square rose, ensure that the rose is aligned prior to tighten the set screw. See Section G-G.
9. Install armored faceplate with M4x6mm screws.

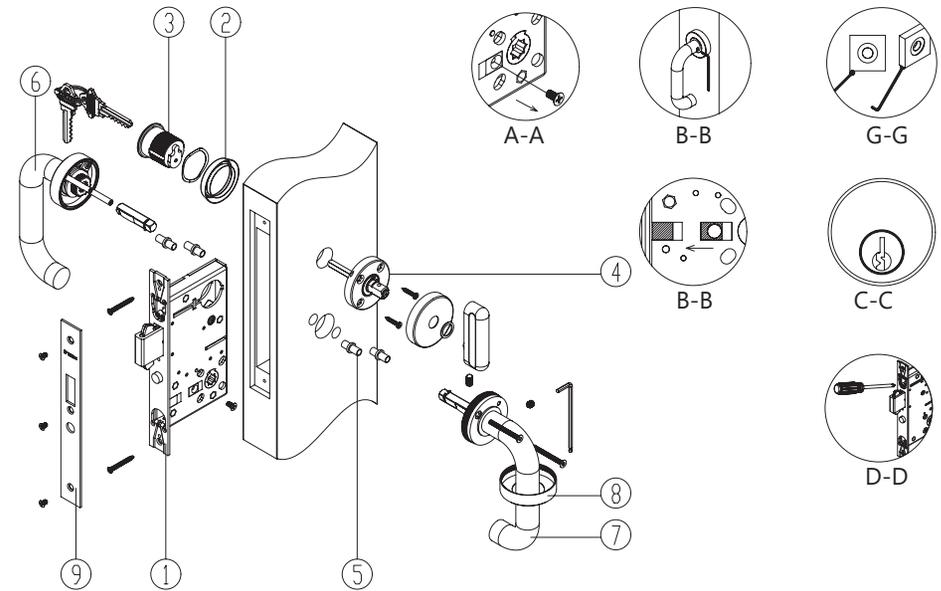


1. Install mortise lockcase in door prep. **NOTE:** DO NOT tighten the faceplate screws until the cylinder has been installed. Make sure the handing screws from the escaping side of the lockcase has been removed. See Section A-A. **NOTE:** Make sure the Entry locking block has been set to the B-B end direction.
2. Screw on outside cylinder escutcheon ring with spacer.
3. Install mortise cylinder. **NOTE:** Key slot on cylinder should be on lower center position. See section C-C. Using a screwdriver, tighten the M4.2x19mm screws on the lockcase to position the cylinder into place. See Section D-D.
4. Mount inside privacy thumbturn rose with M4x6mm screws. Mount rose cover and clear washer before mounting thumbturn piece. Use Allen Key to tighten set screws.
5. Install the compression inserts on both sides.
6. Install outside X series trim. Do not tighten the set screws.
7. Install inside X series trim and tighten the M4x1-3/8" screws.
8. Install the inside rose cover. XGT is threaded, XGS requires a set screw.  
**NOTE:** After the lever is installed, fully tighten the set screws for both inside and outside trims. See Section F-F. **NOTE:** For XGS square rose, ensure that the rose is aligned prior to tighten the set screw. See Section G-G.
9. Install armored faceplate with M4x6mm screws.

## Installation Instructions for Patio Function: PD9660 with X Series Trim

## Installation Instructions for Classroom Function: PD9670 with X Series Trim

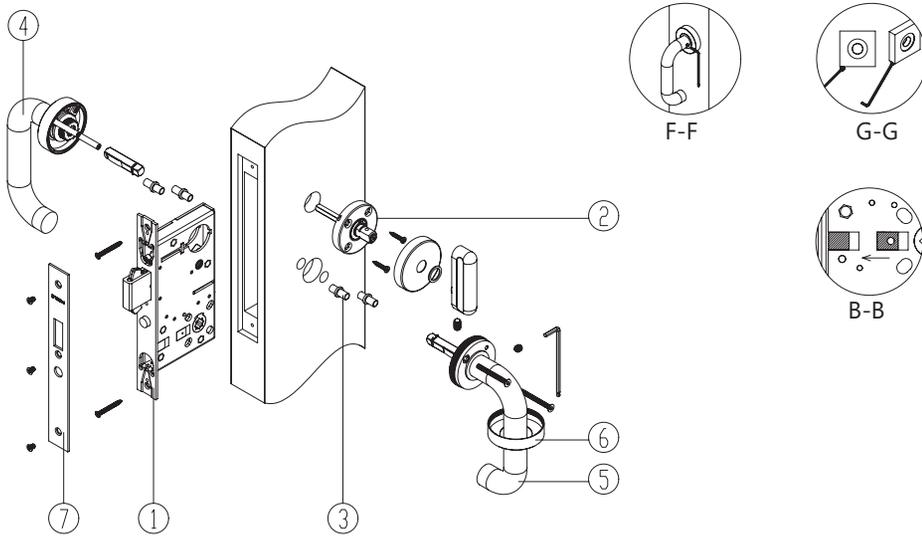


1. Install mortise lockcase in door prep. **NOTE:** Make sure the Entry locking block has been set to the B-B end direction.
2. Mount inside privacy thumbturn rose with M4x6mm screws. Mount rose cover and clear washer before mounting thumbturn piece. Use Allen Key to tighten set screws.
3. Install the compression inserts on both sides.
4. Install outside X series trim. Do not tighten the set screws.
5. Install inside X series trim and tighten the M4x1-3/8" screws.
6. Install the inside rose cover. XGT is threaded, XGS requires a set screw.  
**NOTE:** After the lever is installed, fully tighten the set screws for both inside and outside trims. See Section F-F. **NOTE:** For XGS square rose, ensure that the rose is aligned prior to tighten the set screw. See Section G-G.
7. Install armored faceplate with M4x6mm screws.

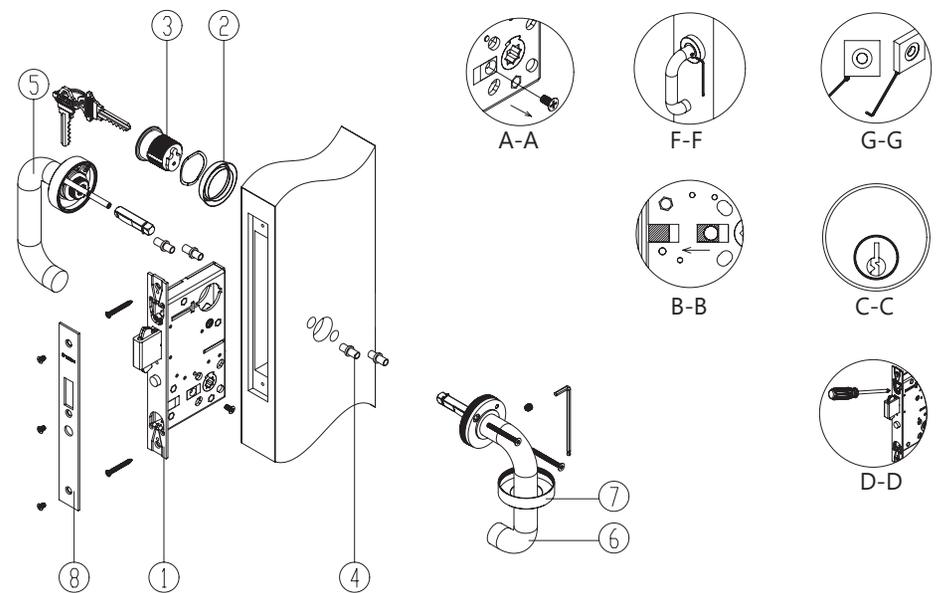


1. Install mortise lockcase in door prep. **NOTE:** DO NOT tighten the faceplate screws until the cylinder has been installed. Make sure handing screws from the escaping side of the lockcase has been removed. See Section A-A. **NOTE:** Make sure the Entry locking block has been set to the B-B end direction.
2. Screw on outside cylinder escutcheon ring with spacer.
3. Install mortise cylinder. **NOTE:** Key slot on cylinder should be on lower center position. See section C-C. Using a screwdriver, tighten the M4.2x19mm screws on the lockcase to position the cylinder into place. See Section D-D.
4. Install the compression inserts on both sides.
5. Install outside X series trim. Do not tighten the set screws.
6. Install inside X series trim and tighten the M4x1-3/8" screws.
7. Install the inside rose cover. XGT is threaded, XGS requires a set screw.  
**NOTE:** After the lever is installed, fully tighten the set screws for both inside and outside trims. See Section F-F. **NOTE:** For XGS square rose, ensure that the rose is aligned prior to tighten the set screw. See Section G-G.
8. Install armored faceplate with M4x6mm screws.

## Installation Instructions for Storeroom Function: PD9680 with X Series Trim

## Installation Instructions for Exit Function: PD9690 with X Series Trim

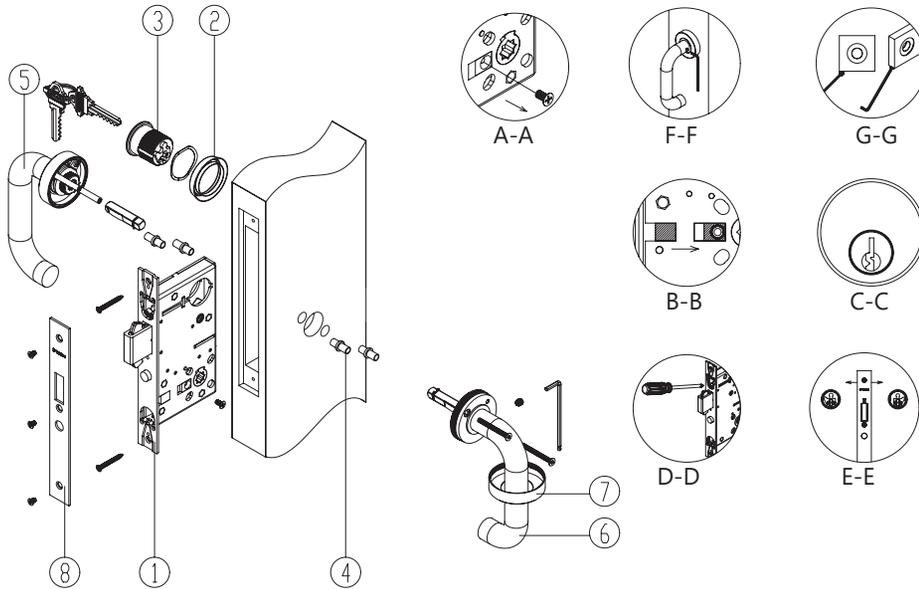


1. Install mortise lockcase in door prep. **NOTE:** DO NOT tighten the faceplate screws until the cylinder has been installed. Make sure handing screws from the escaping side of the lockcase has been removed. See Section A-A. **NOTE:** Make sure the Entry locking block has been set to the B-B end direction.
2. Screw on outside cylinder escutcheon ring with spacer.
3. Install mortise cylinder. **NOTE:** This function requires a special cylinder cam. See Section E-E. **NOTE:** Key slot on cylinder should be on lower center position. See section C-C. Using a screwdriver, tighten the M4.2x19mm screws on the lockcase to position the cylinder into place. See Section D-D.
4. Install the compression inserts on both sides.
5. Install outside X series trim. Do not tighten the set screws.
6. Install inside X series trim and tighten the M4x1-3/8" screws.
7. Install the inside rose cover. XGT is threaded, XGS requires a set screw. **NOTE:** After the lever is installed, fully tighten the set screws for both inside and outside trims. See Section F-F. **NOTE:** For XGS square rose, ensure that the rose is aligned prior to tighten the set screw. See Section G-G.
8. Install armored faceplate with M4x6mm screws.

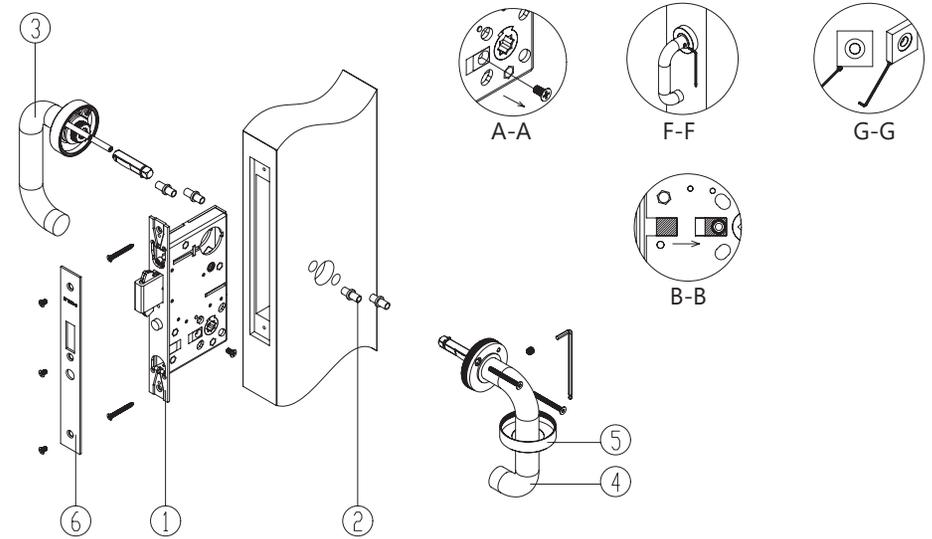


1. Install mortise lockcase in door prep. **NOTE:** DO NOT tighten the faceplate screws until the cylinder has been installed. Make sure handing screws from the escaping side of the lockcase has been removed. See Section A-A. **NOTE:** Make sure the Entry locking block has been set to the B-B end direction.
2. Install the compression inserts on both sides.
3. Install outside X series trim. Do not tighten the set screws.
4. Install inside X series trim and tighten the M4x1-3/8" screws.
5. Install the inside rose cover. XGT is threaded, XGS requires a set screw. **NOTE:** After the lever is installed, fully tighten the set screws for both inside and outside trims. See Section F-F. **NOTE:** For XGS square rose, ensure that the rose is aligned prior to tighten the set screw. See Section G-G.
6. Install armored faceplate with M4x6mm screws.

## Installation Instructions for Communicating Function: PD9692 with X Series Trim

## Installation Instructions for Exit Function: PD9695 with X Series Trim

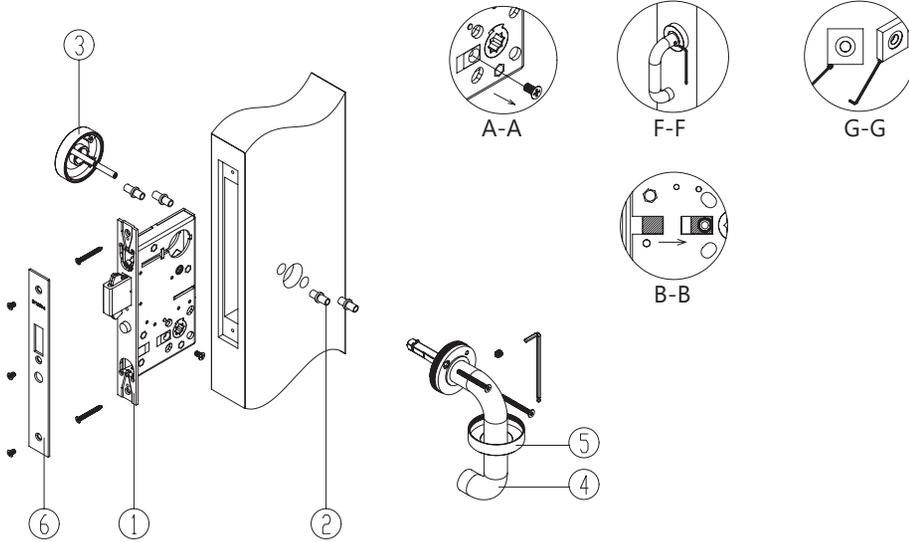

1. Install mortise lockcase in door prep. **NOTE:** DO NOT tighten the faceplate screws until the cylinder has been installed. Make sure handing screws from the escaping sides of the lockcase has been removed. See Section A-A. **NOTE:** Make sure the Entry locking block has been set to the B-B end direction.
2. Install the compression inserts on both sides.
3. Install the outside blank rose trim. Do not tighten the set screws.
4. Install inside X series trim and tighten the M4x1-3/8" screws.
5. Install the inside rose cover. XGT is threaded, XGS requires a set screw. **NOTE:** After the lever is installed, fully tighten the set screws for both inside and outside trims. See Section F-F. **NOTE:** For XGS square rose, ensure that the rose is aligned prior to tighten the set screw. See Section G-G.
6. Install armored faceplate with M4x6mm screws.

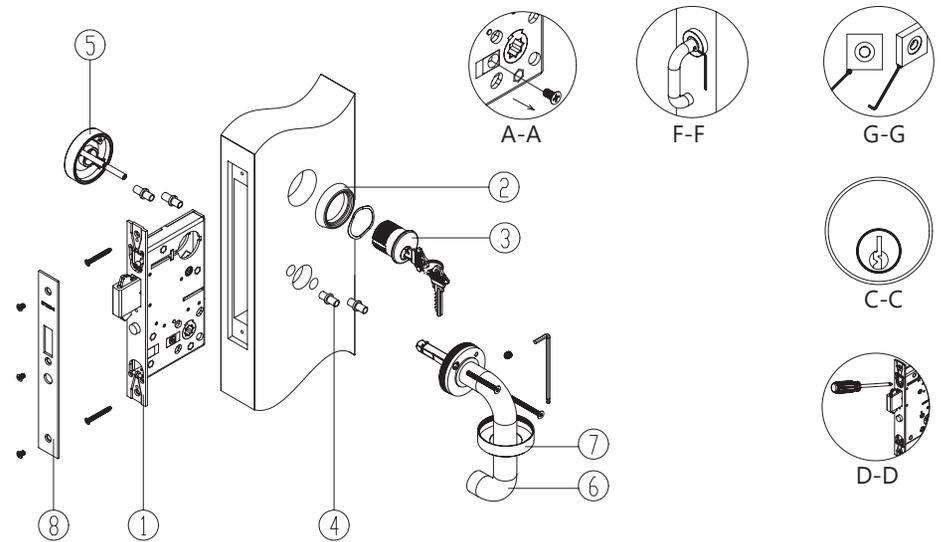

1. Install mortise lockcase in door prep. **NOTE:** DO NOT tighten the faceplate screws until the cylinder has been installed. Make sure handing screws from both sides of the lockcase has been removed. See Section A-A. **NOTE:** Make sure the Entry locking block has been set to the B-B end direction.
2. Screw on outside cylinder escutcheon ring with spacer.
3. Install mortise cylinder. **NOTE:** This function requires a special cylinder cam. **NOTE:** Key slot on cylinder should be on lower center position. See section D-D. Using a screwdriver, tighten the M4.2x19mm screws on the lockcase to position the cylinder into place. See Section D-D.
4. Install the compression inserts on both sides.
5. Install the outside blank rose cover. Do not tighten the set screws.
6. Install inside X series trim and tighten the M4x1-3/8" screws.
7. Install the inside rose cover. XGT is threaded, XGS requires a set screw. **NOTE:** After the lever is installed, fully tighten the set screws for both inside and outside trims. See Section F-F. **NOTE:** For XGS square rose, ensure that the rose is aligned prior to tighten the set screw. See Section G-G.
8. Install armored faceplate with M4x6mm screws.