


# Template for Smart Mortise Lock With SFR Plate

Case Size: 4" x 6-7/32" x 1" (102mm x 158mm x 25mm)  
Backset: 2-3/4" (70mm)  
Lock Front: 1-1/4" x 8" x 1/4" (32mm x 203mm x 6mm)

Knob or Lever to Cylinder: 3-55/64" (98mm)  
Knob or Lever to Turn Piece: 2-11/16" (68mm)

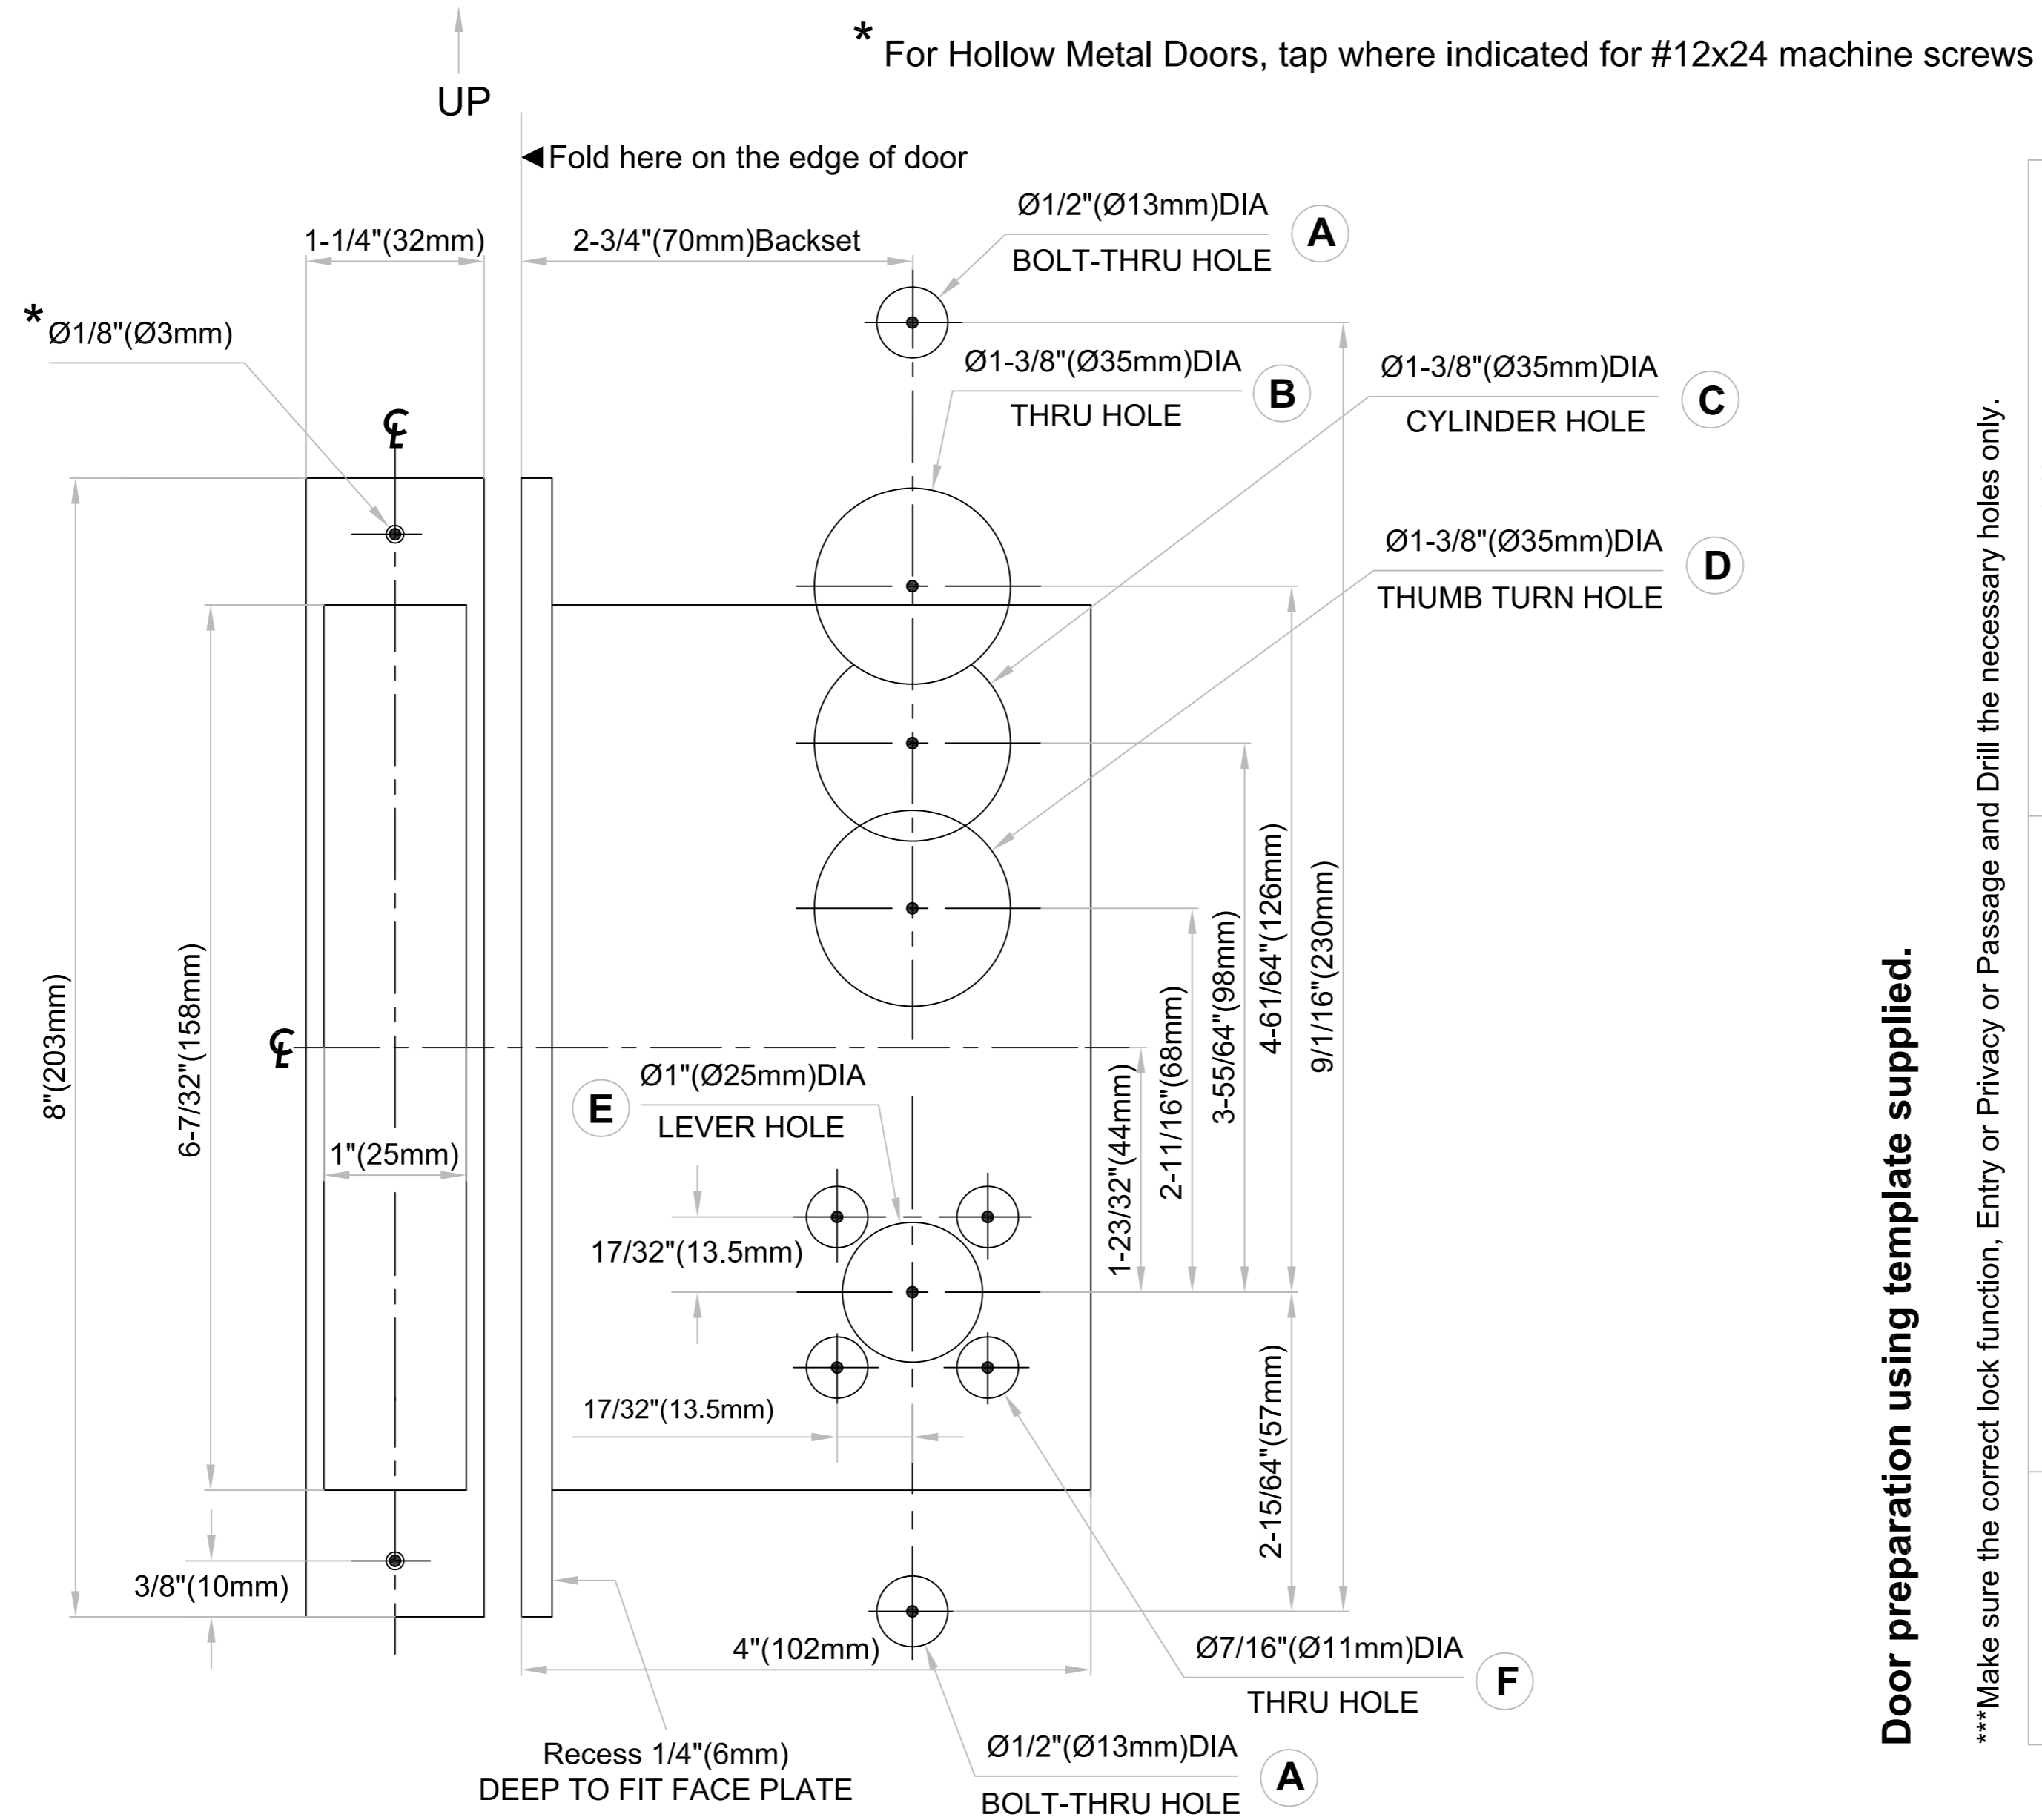

## Door preparation using template supplied.

\*\*\*Make sure the correct lock function, Entry or Privacy or Passage and Drill the necessary holes only.

Function	Item Ref.	Outside Holes						Inside Holes						
		A	B	C	D	E	F	A	B	C	D	E	F	
Entry	MC7438	●	●	●	●	●	●	●	●	●	●	●	●	●

# inox<sup>®</sup> Template for Smart Mortise Lock With SFR Plate


Engineered Beautifully™

Case Size: 4" x 6-7/32" x 1" (102mm x 158mm x 25mm) Knob or Lever to Cylinder: 3-55/64" (98mm)

Backset: 2-3/4" (70mm)

Lock Front: 1-1/4" x 8" x 1/4" (32mm x 203mm x 6mm) Knob or Lever to Turn Piece: 2-11/16" (68mm)

\* For Hollow Metal Doors, tap where indicated for #12x24 machine screws

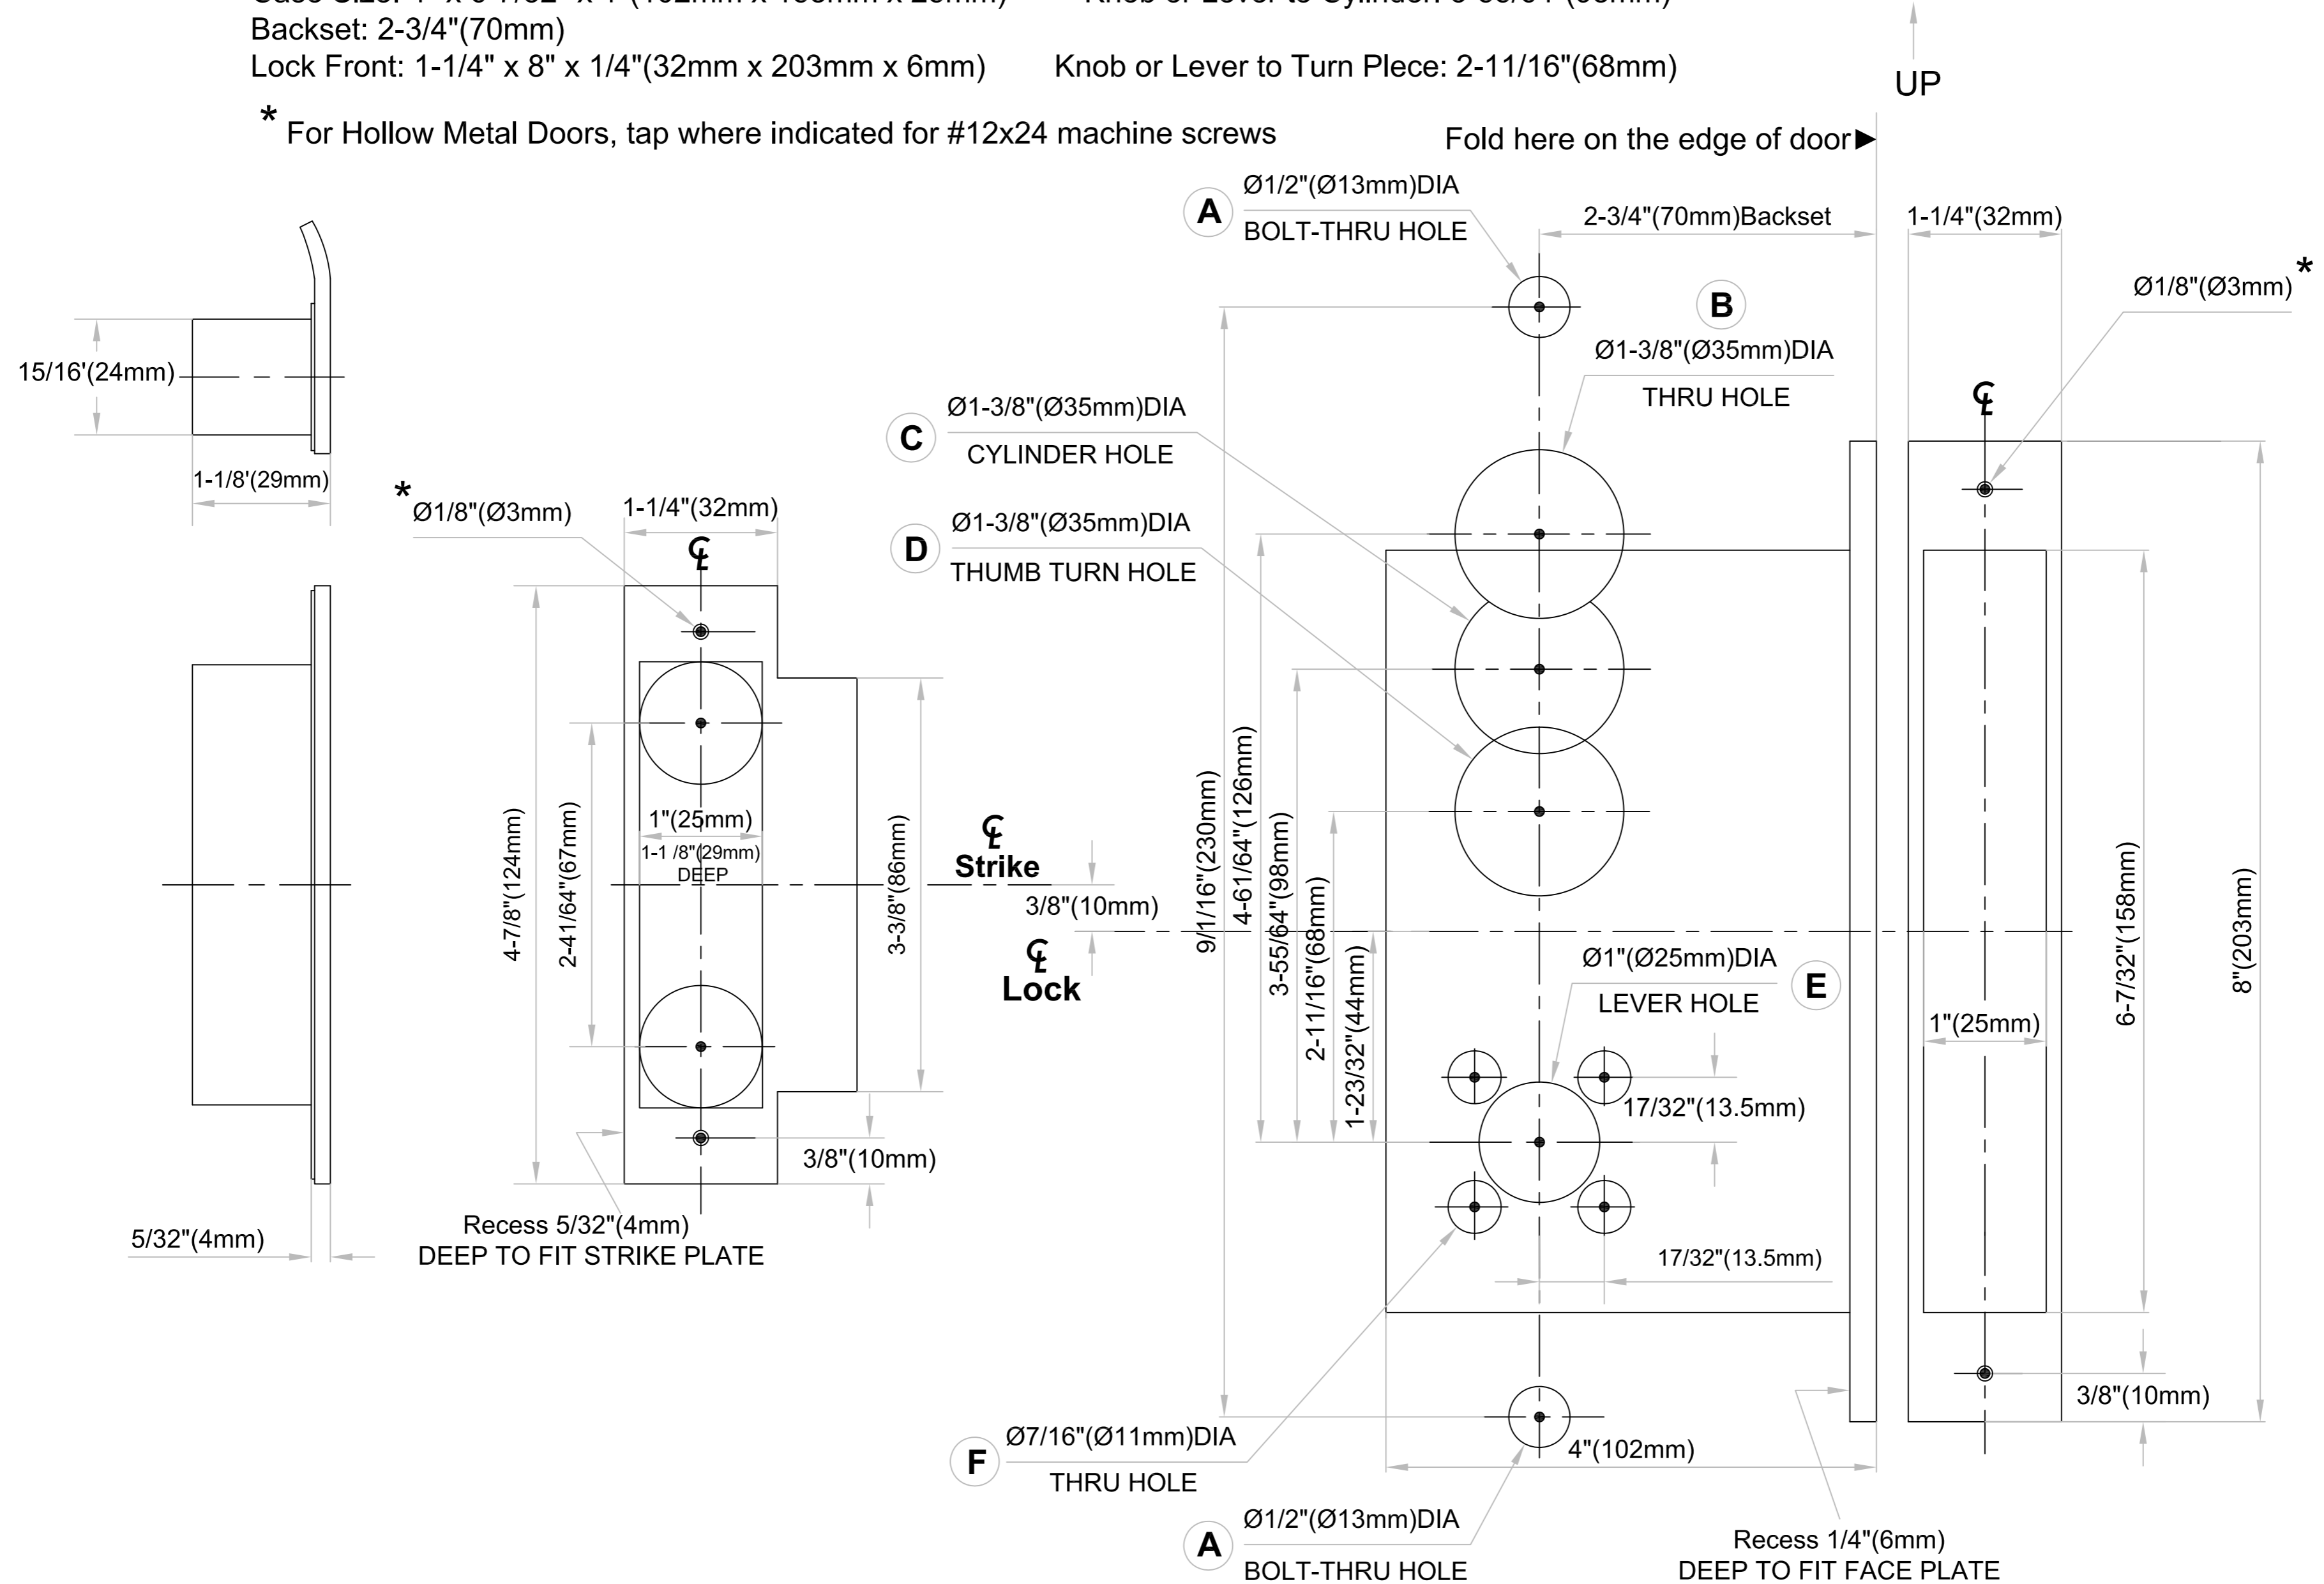

Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.

FOR OPPOSITE HAND  
PLEASE SEE REVERSE SIDE

PM-TMISM7000-CTC230-234  
V20221122