


Template For PD95 (2-1/2" Backset) Mortise Locks with XGT/XGS Lever or Surface Pull Trim for Emergency Egress lock

Case Size: 3-3/8" x 6" x 11/16" (86mm x 152mm x 17mm)

Backset: 2-1/2" (63.5mm)

Lock Front: 1" x 8" x 15/64" (25.4mm x 203mm x 6mm)

Cylinder to Thumb Turn: 1-3/16" (30mm)

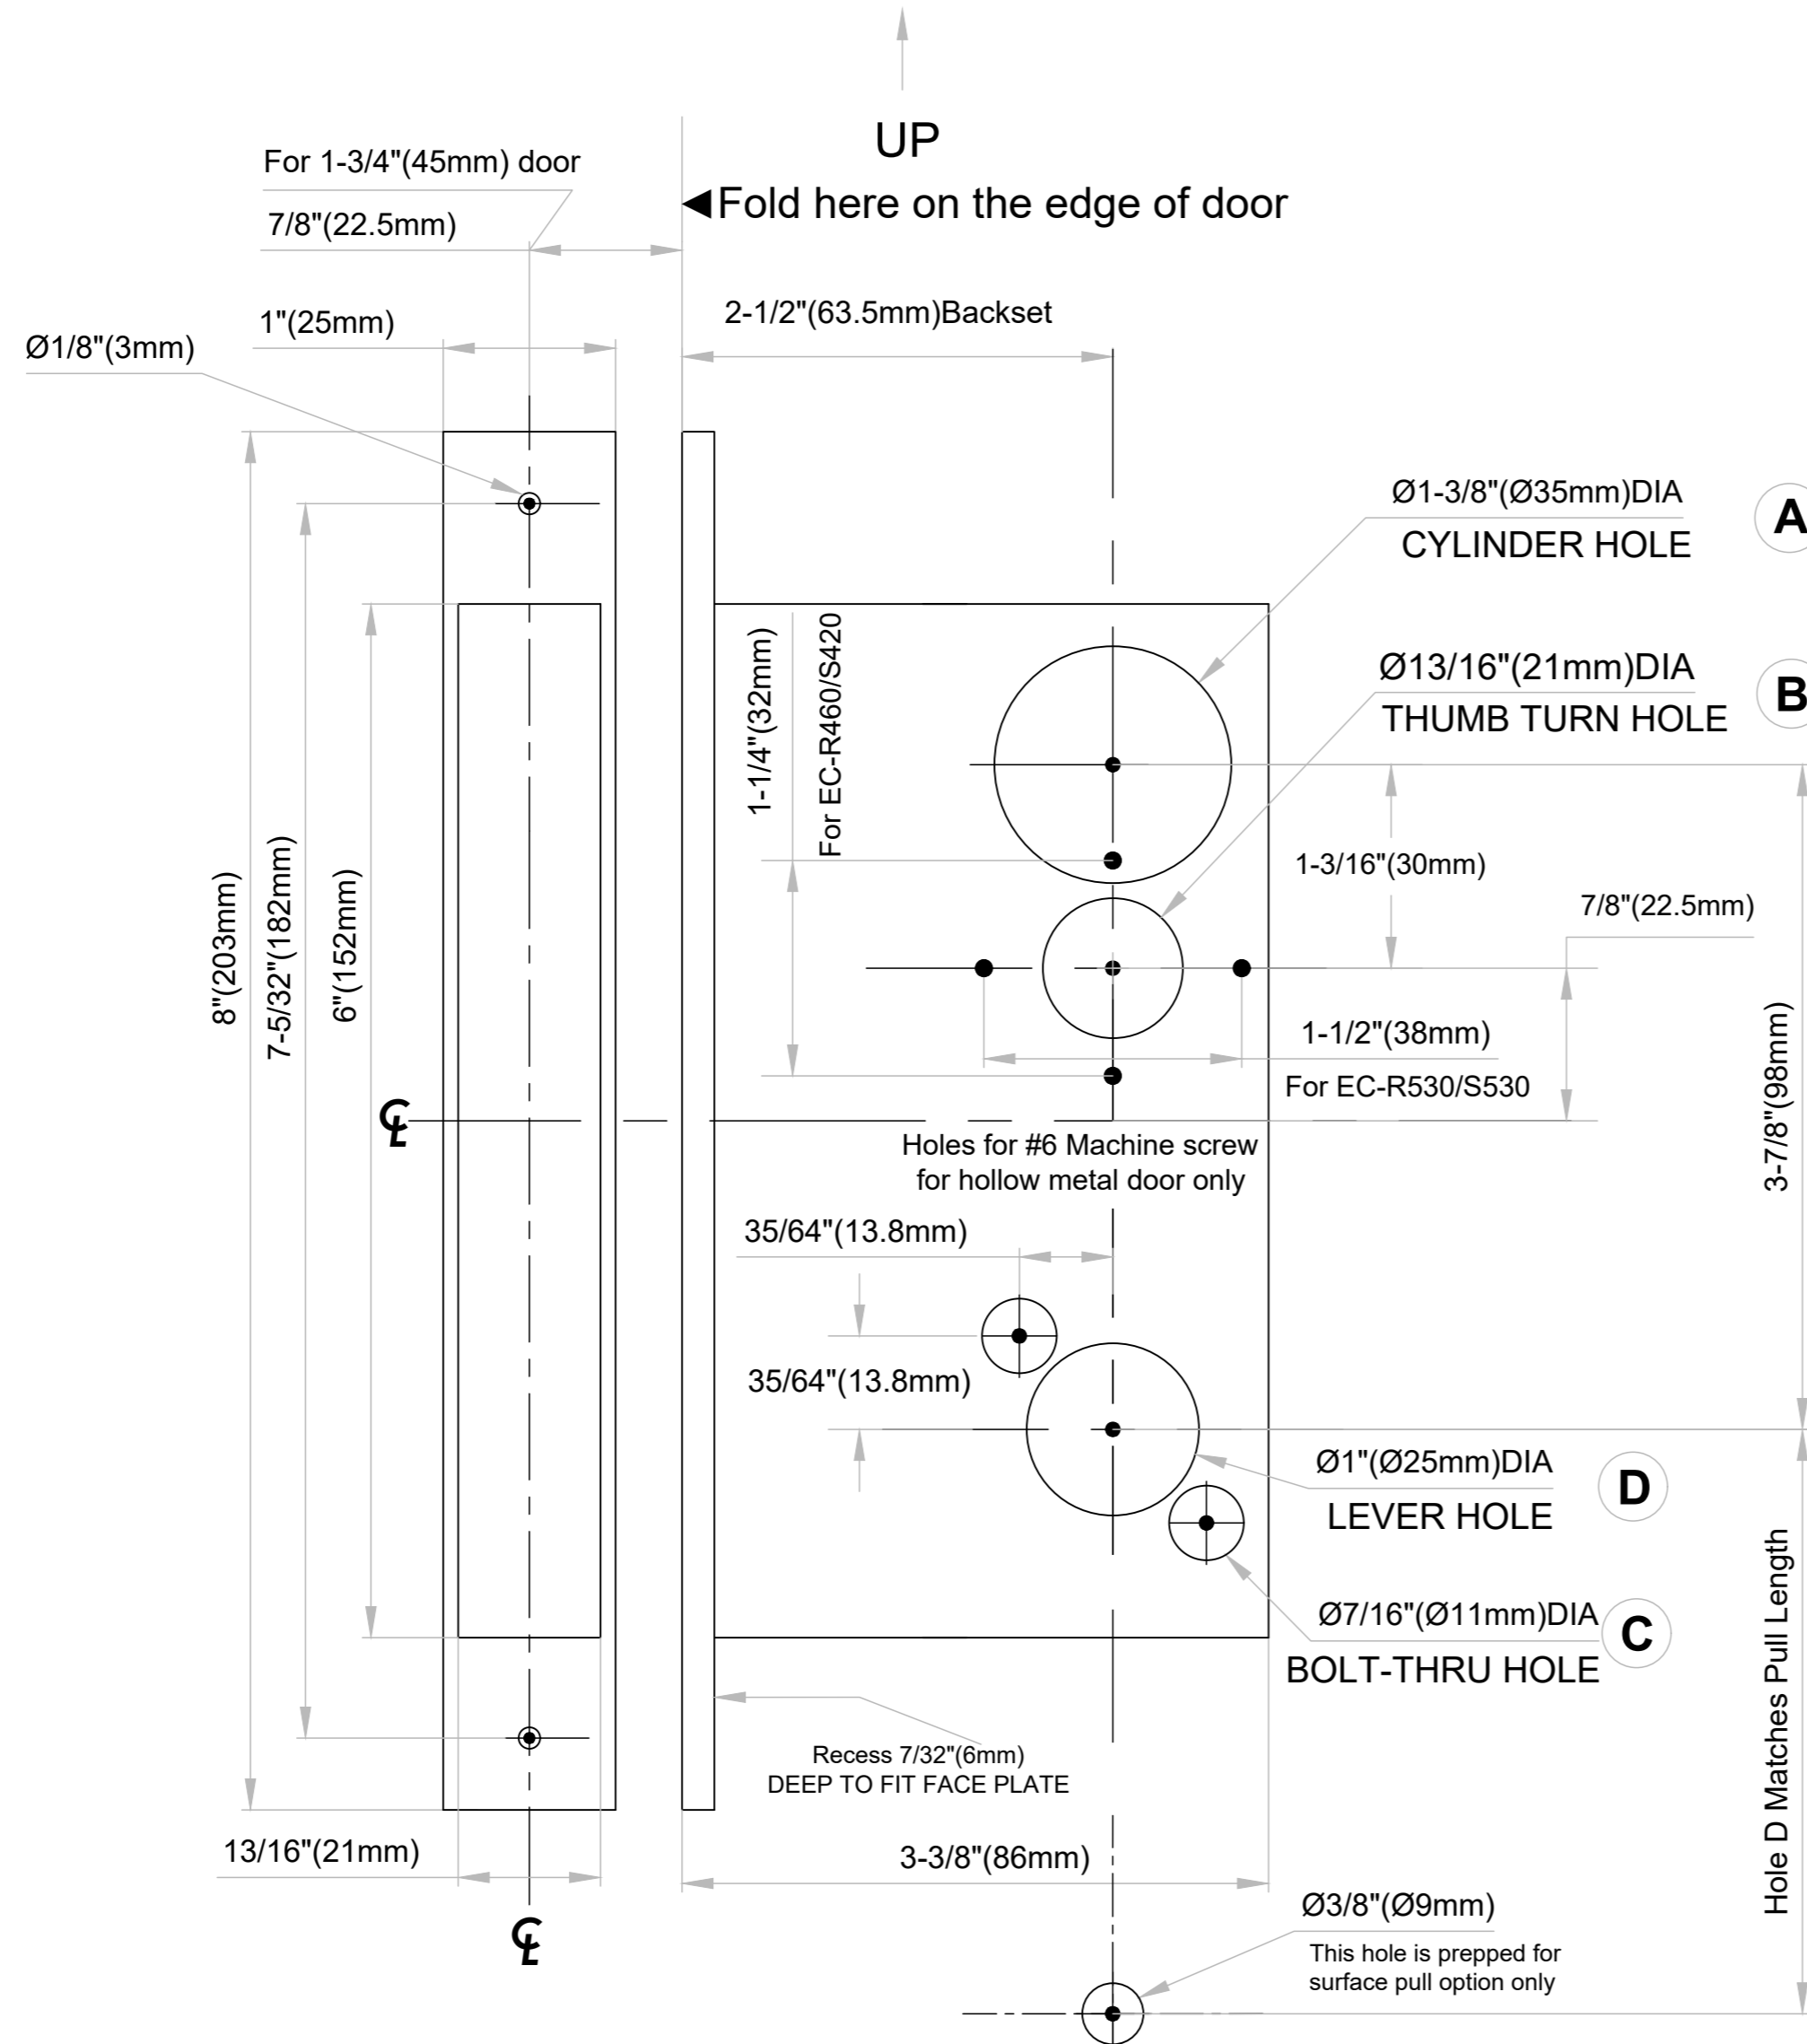

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.

Match With Vertical Line Drawn On Door

Door preparation using template supplied.

Please read the Installation Instruction Carefully before drilling any holes on the door.
Choose the correct holes to drill for the corresponding functions.

Function	Item Ref.	Outside Holes				Inside Holes							
		A	B	C	D	A	B	C	D				
Privacy	...PD9540...		●	●	●		●	●	●	●	●	●	●
Entry	...PD9550...	●		●	●		●	●	●		●	●	●
Patio	...PD9560...			●	●			●	●			●	●
Classroom	...PD9570...	●			●								●
Communicating	...PD9595...												●


Template For PD95 (2-1/2" Backset) Mortise Locks with XGT/XGS Lever or Surface Pull Trim for Emergency Egress lock

Case Size: 3-3/8" x 6" x 11/16" (86mm x 152mm x 17mm)

Backset: 2-1/2" (63.5mm)

Lock Front: 1" x 8" x 15/64" (25.4mm x 203mm x 6mm)

Cylinder to Thumb Turn: 1-3/16" (30mm)

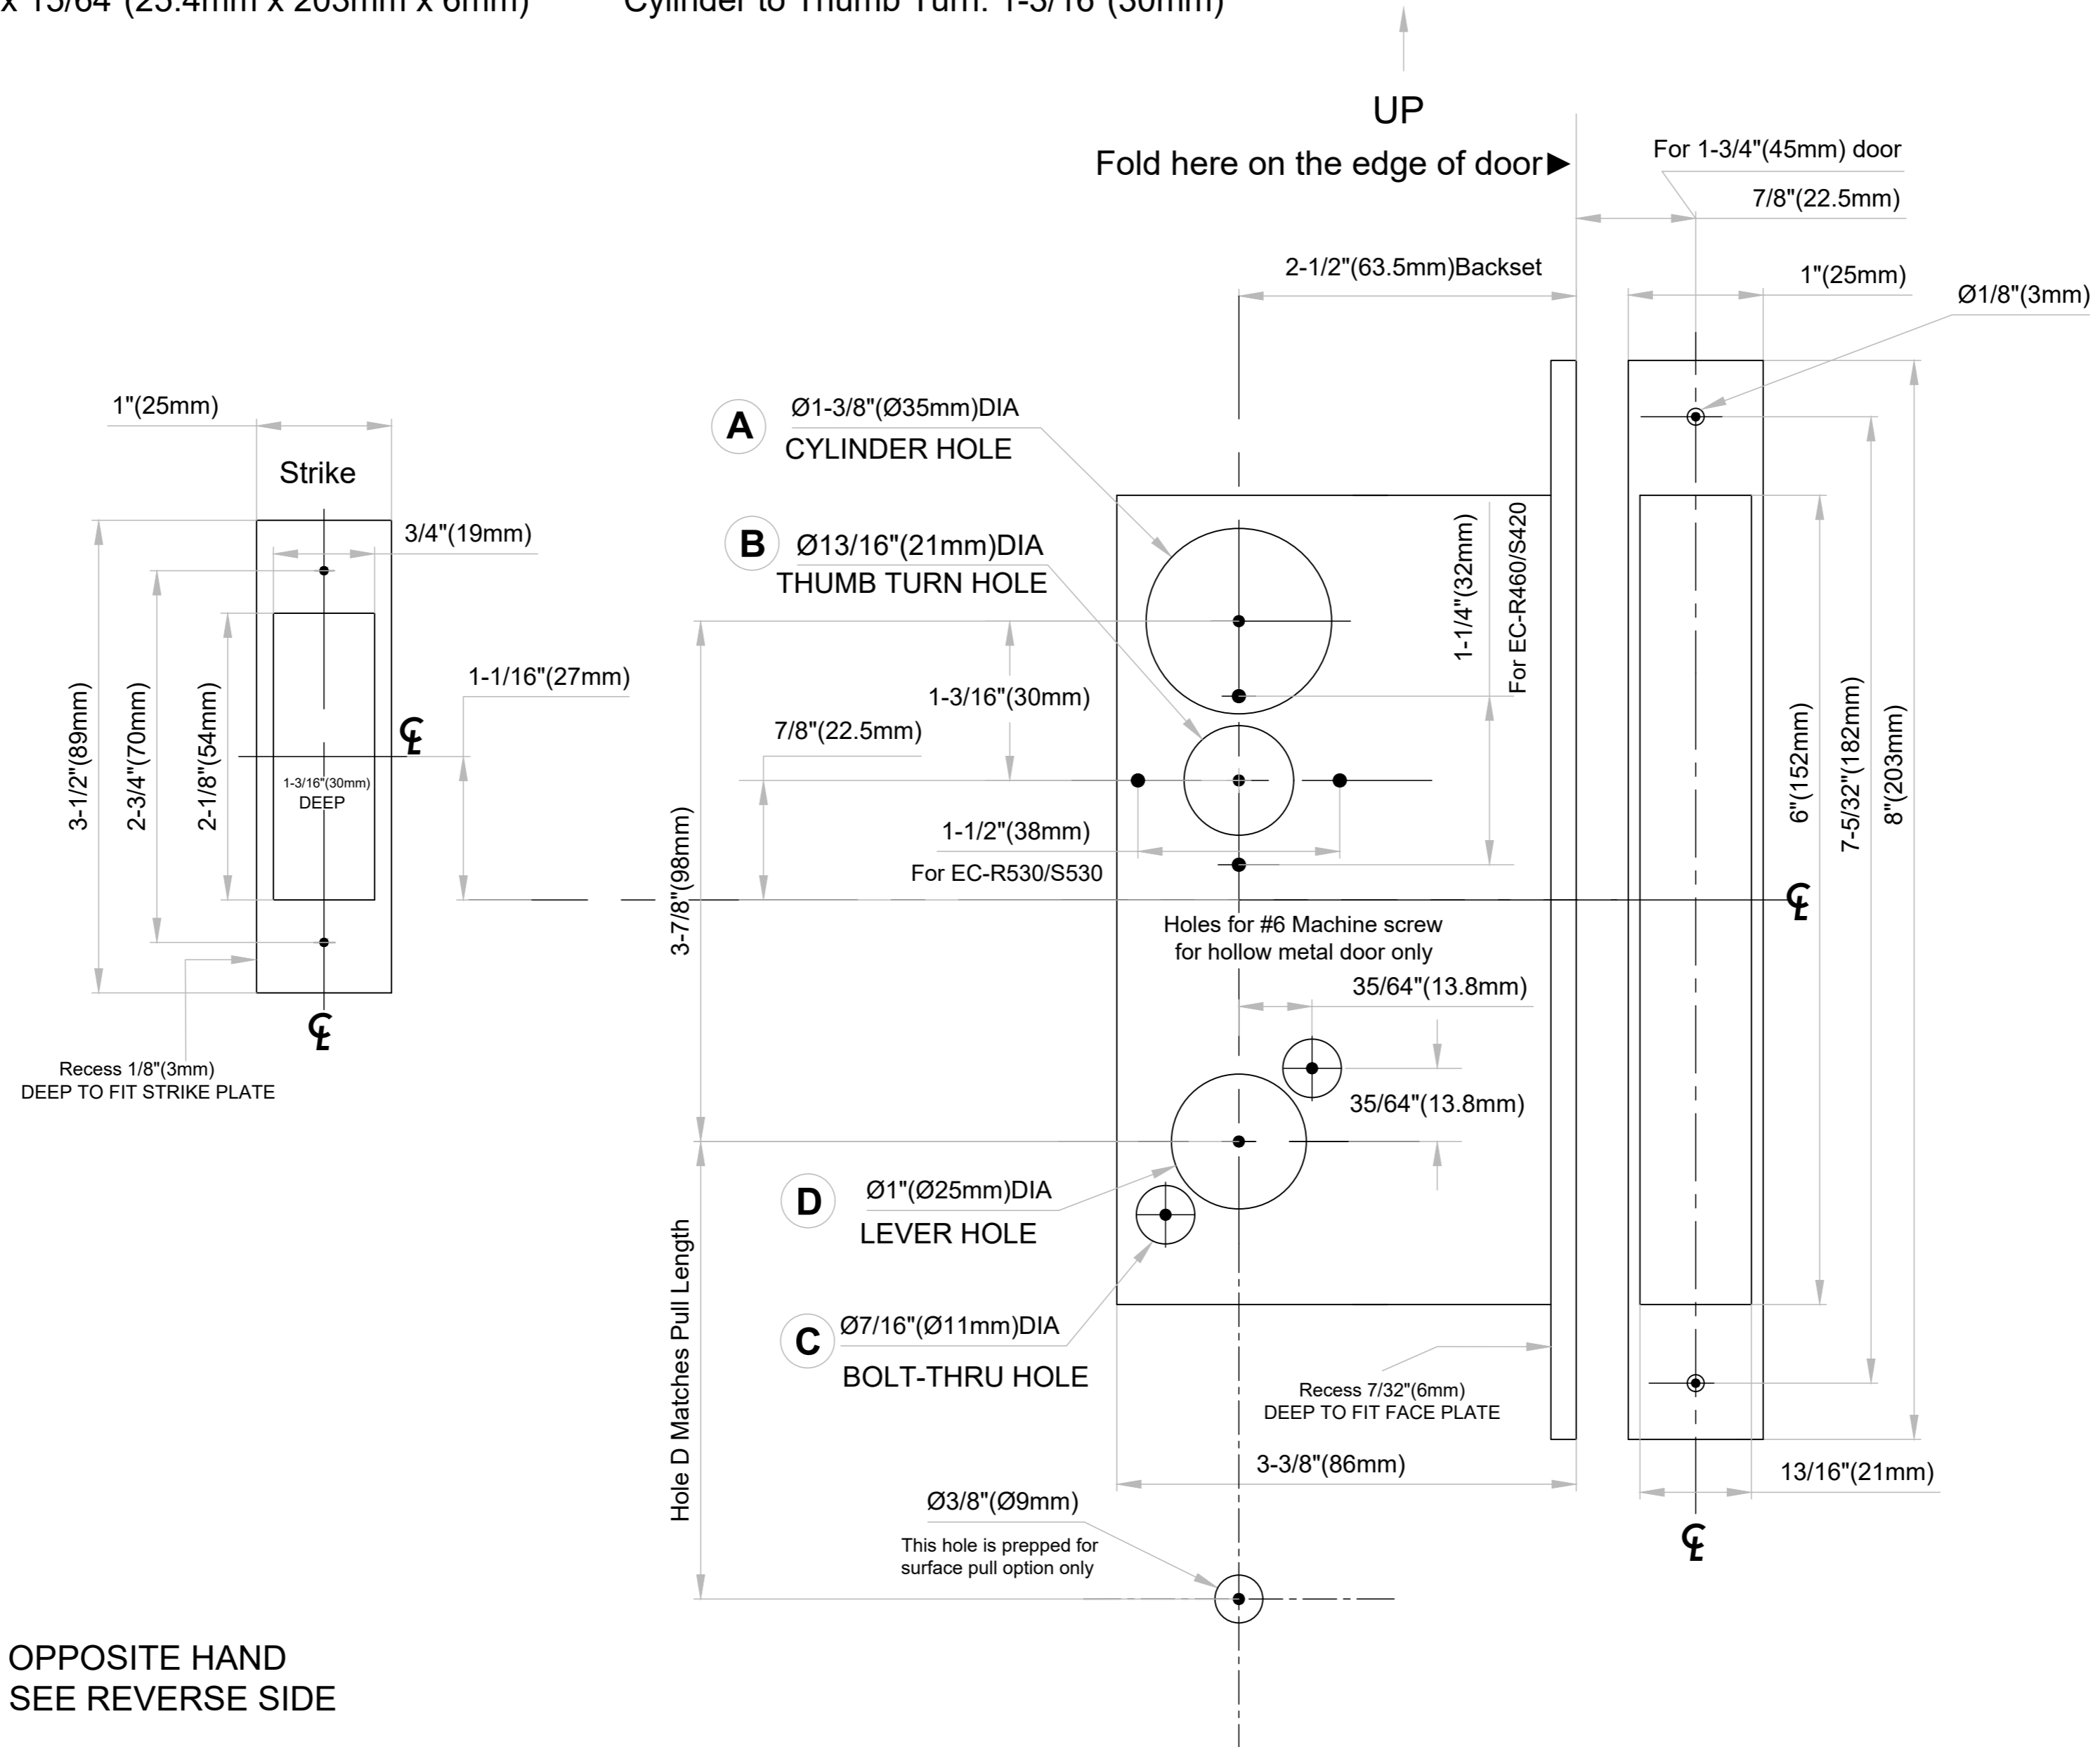

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.

Match With Vertical Line Drawn On Door