




Template For PD97PT (2-1/2" Backset) Mortise Locks with XGT/XGS Lever Trim for Emergency Egress lock

Case Size: 3-3/8" x 6-1/2" x 11/16"(86mm x 166mm x 17mm)

Backset: 2-1/2"(63.5mm)

Lock Front: 1" x 8" x 15/64"(25.4mm x 203mm x 6mm)

Cylinder to Thumb Turn: 1-3/16"(30mm)

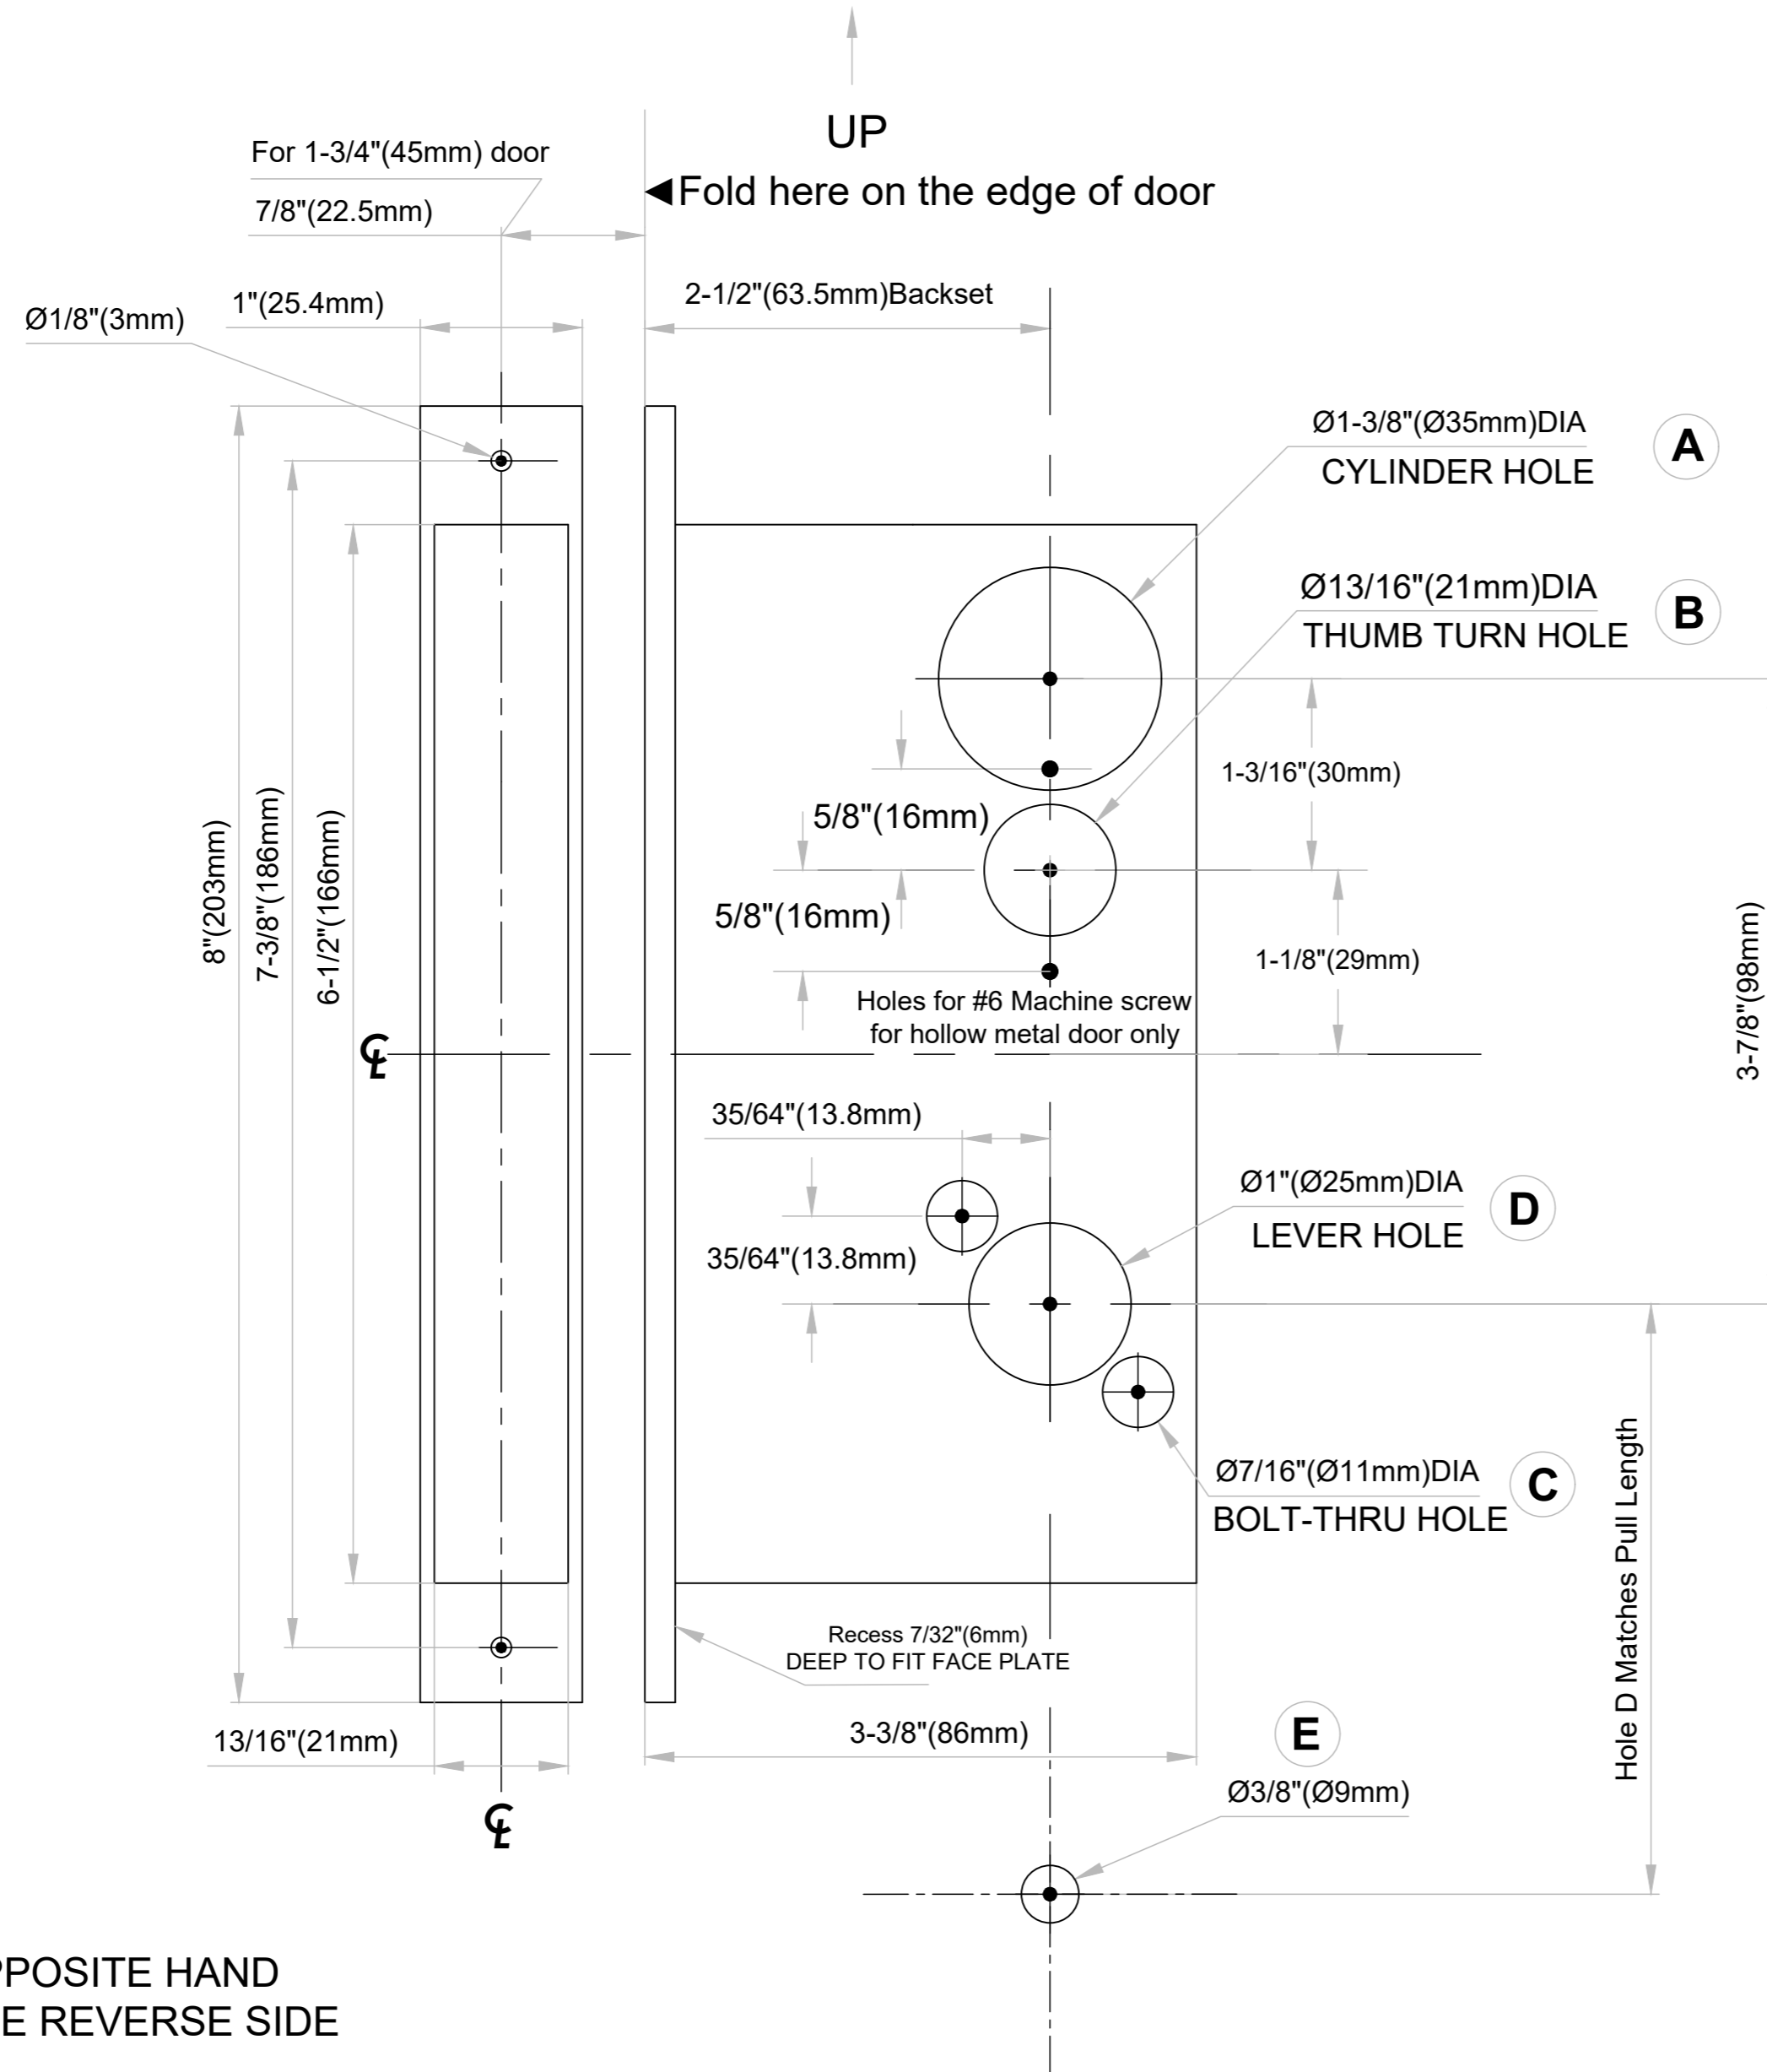

Door preparation using template supplied.

Please read the Installation Instruction Carefully before drilling any holes on the door. Choose the correct holes to drill for the corresponding functions.

Lever by Lever	Item Ref.	Outside Holes					Inside Holes					
		A	B	C	D	E	A	B	C	D	E	
Privacy	...PD97PT40...		●	●	●	●		●	●	●	●	●
Entry	...PD97PT50...	●						●	●	●		
Patio/Exit	...PD97PT60...			●	●	●						
Classroom	...PD97PT70...	●										
Security Communicating	...PD97PT95...											●

Lever by Pull handle	Item Ref.	Outside Holes					Inside Holes					
		A	B	C	D	E	A	B	C	D	E	
Privacy	...PD97PT40...		●	●	●	●		●	●	●	●	●
Entry	...PD97PT50...	●						●	●	●		
Patio/Exit	...PD97PT60...			●	●	●						
Classroom	...PD97PD70...	●										

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.

Match With Vertical Line Drawn On Door

PM-TMPD97PT-38-212
V20220426


Template For PD97PT (2-1/2" Backset) Mortise Locks with XGT/XGS Lever Trim for Emergency Egress lock

Case Size: 3-3/8" x 6-1/2" x 11/16"(86mm x 166mm x 17mm)

Backset: 2-1/2"(63.5mm)

Lock Front: 1" x 8" x 15/64"(25.4mm x 203mm x 6mm)

Cylinder to Thumb Turn: 1-3/16"(30mm)

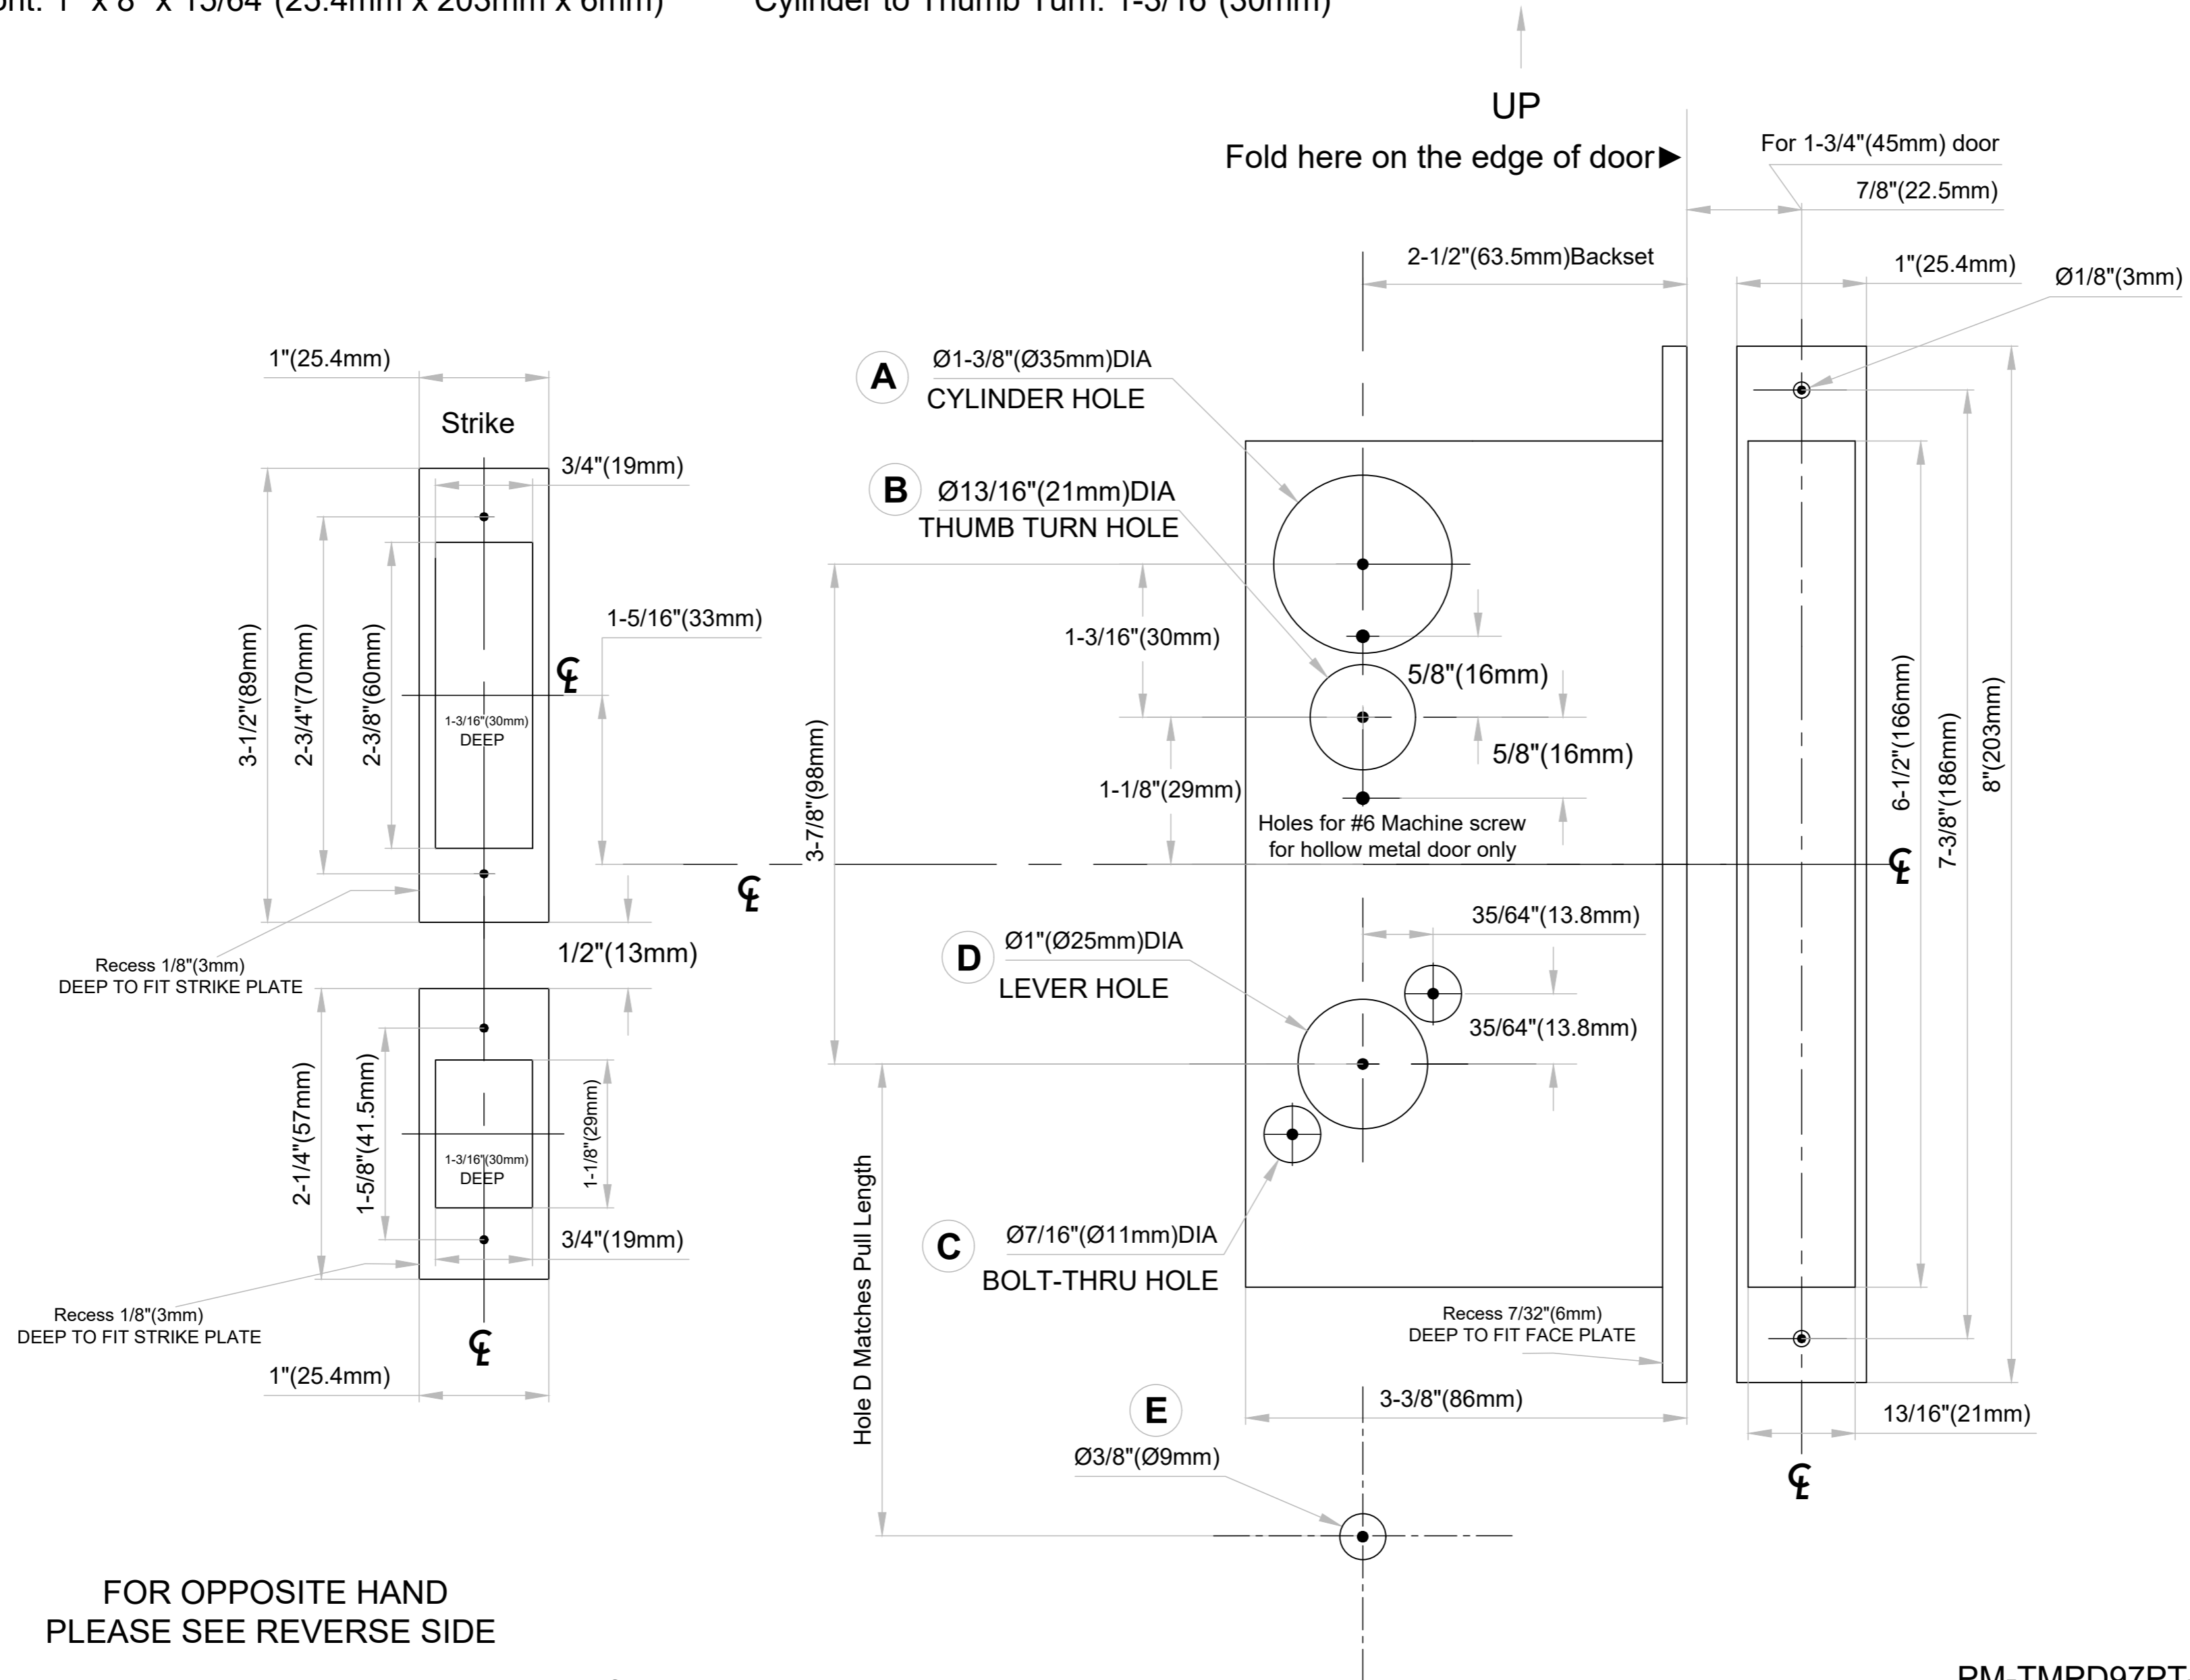

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.

Match With Vertical Line Drawn On Door

PM-TMPD97PT-38-212
V20220426