




Template For PD97PT/PD97PT-ATL/PD97ES (2-3/4" Backset) Mortise Locks with XGT/XGS Lever or Surface Pull Trim for Emergency Egress lock

Case Size: 3-21/32" x 6-1/2" x 11/16"(93mm x 166mm x 17mm)

Backset: 2-3/4"(70mm)

Lock Front: 1" x 8" x 15/64"(25.4mm x 203mm x 6mm)

Cylinder to Thumb Turn: 1-3/16"(30mm)

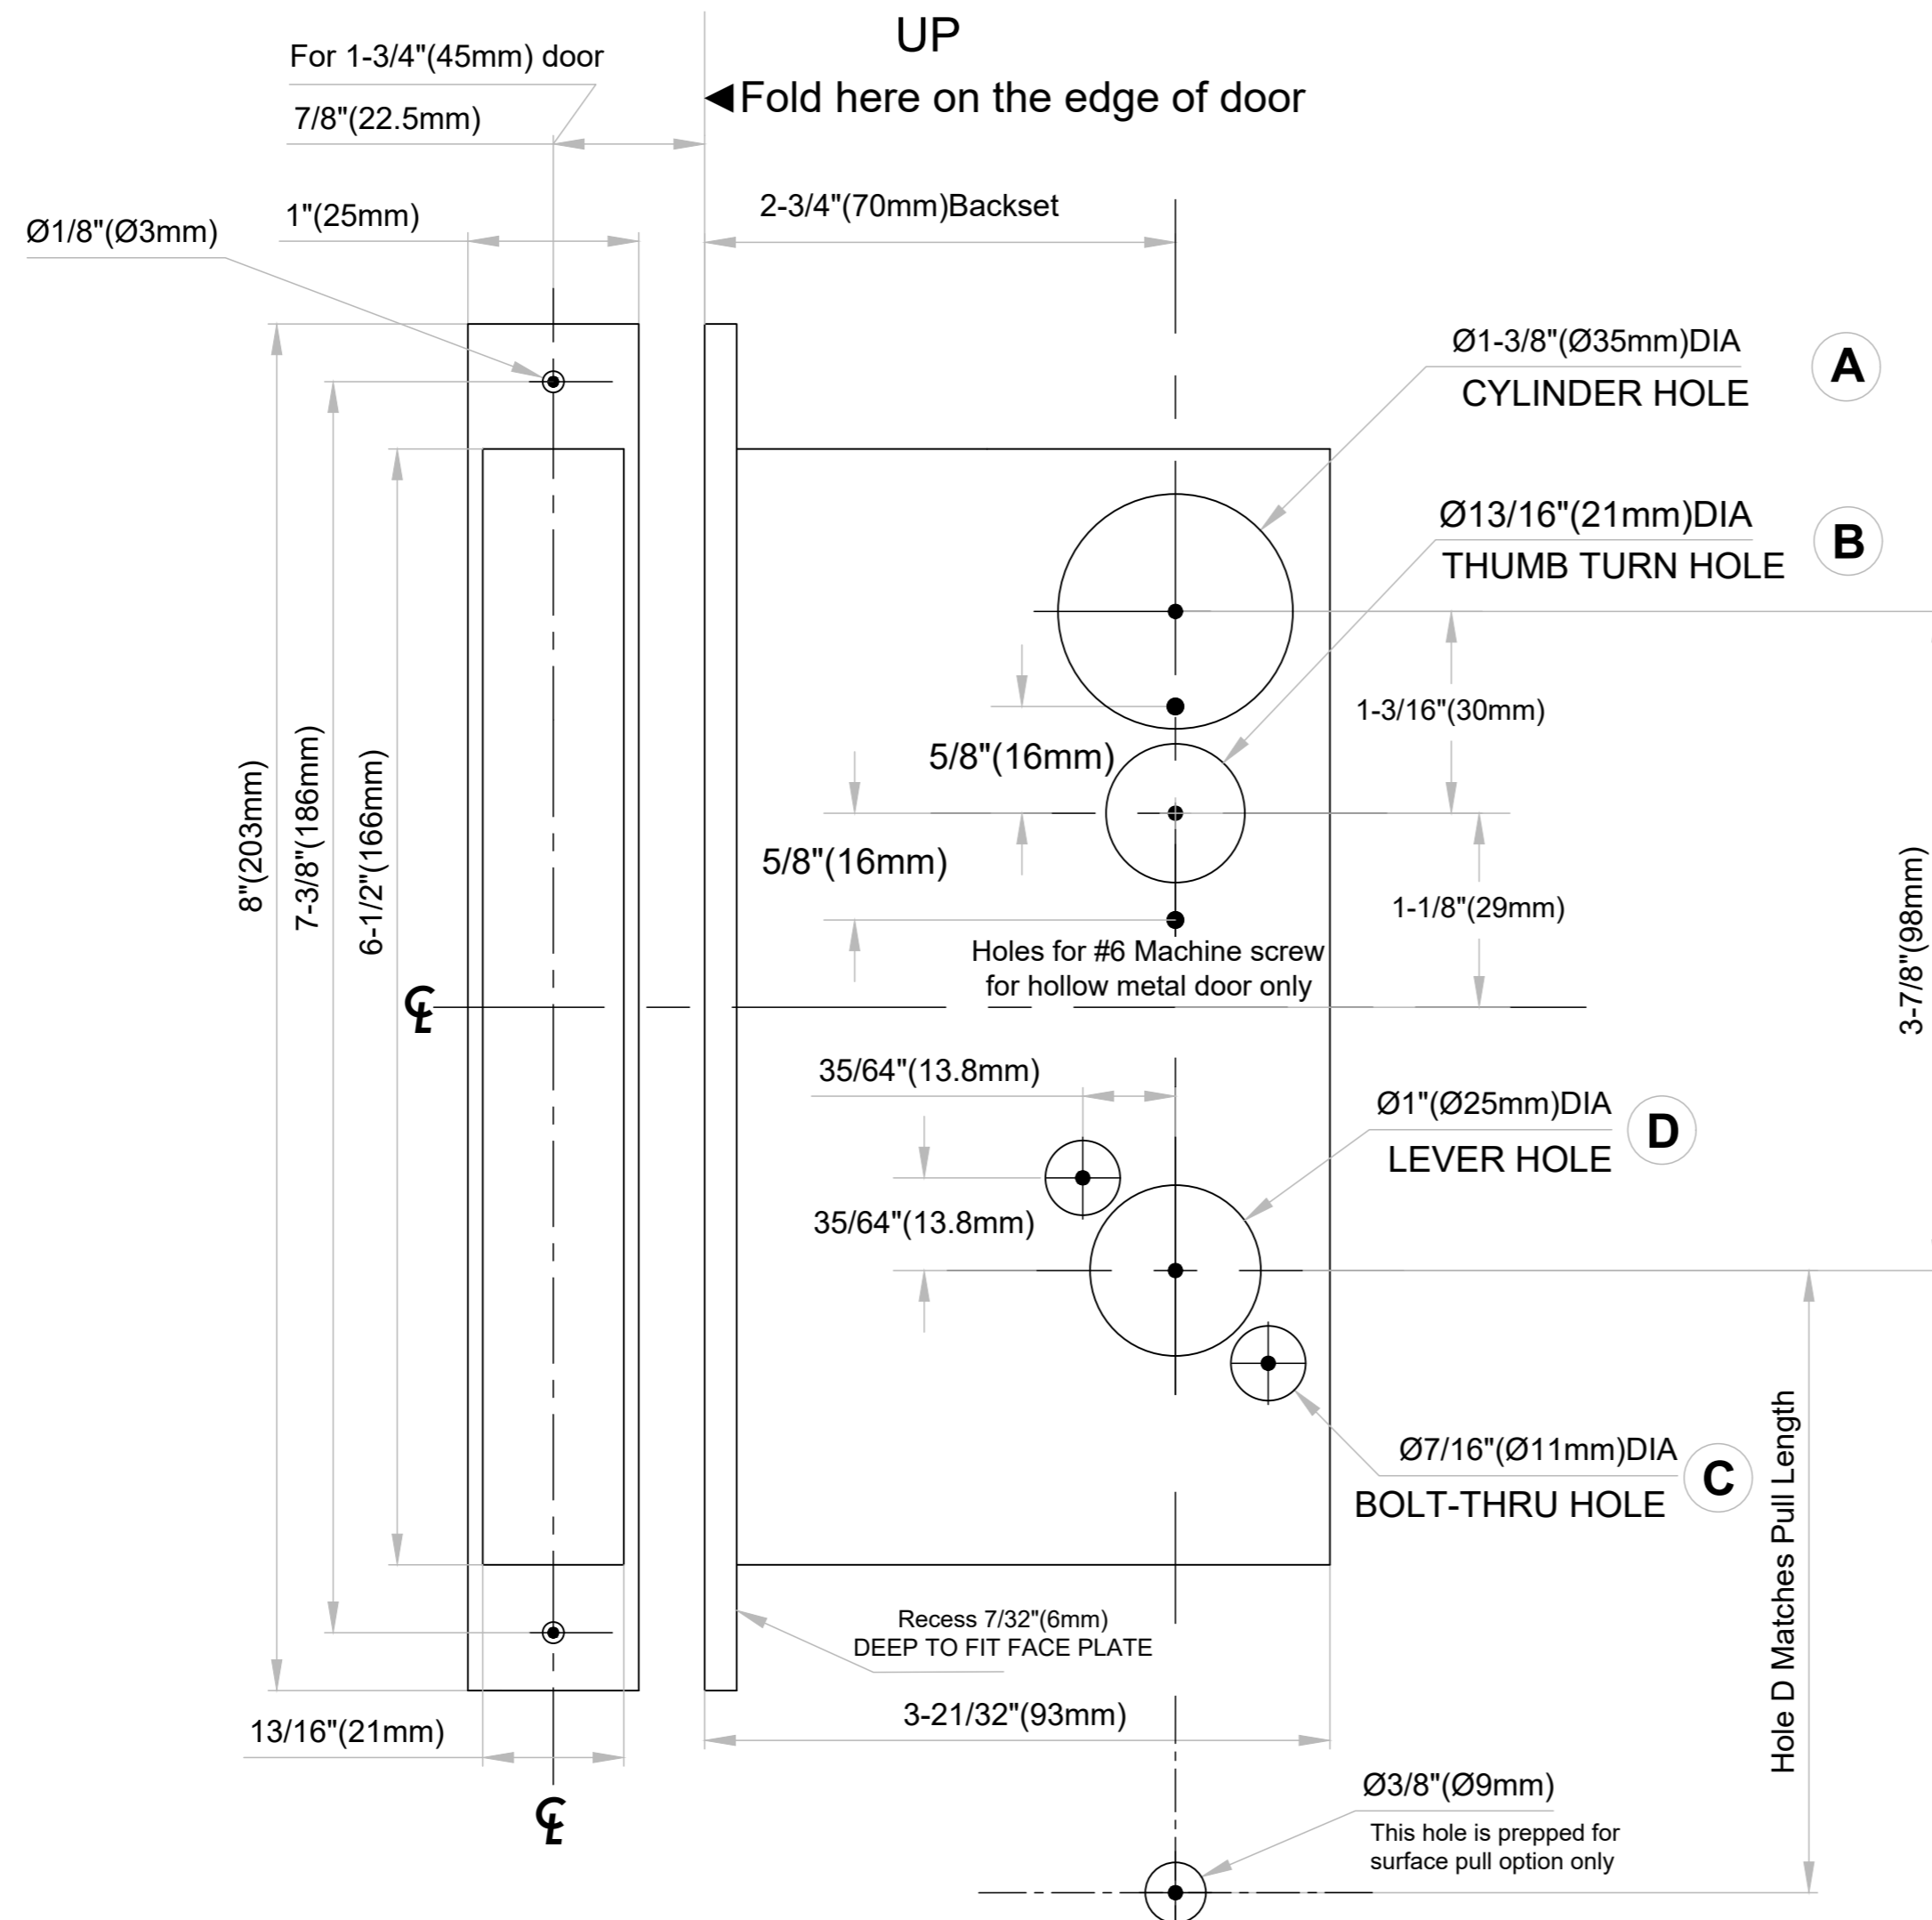

Door preparation using template supplied.

Please read the Installation Instruction Carefully before drilling any holes on the door. Choose the correct holes to drill for the corresponding functions.

| Function | Item Ref. | Outside Holes | | | | Inside Holes | | | |
|---------------|--------------------------------------|---------------|---|---|---|--------------|---|---|---|
| | | A | B | C | D | A | B | C | D |
| Privacy | PD97PT40 | | ● | ● | ● | ● | ● | ● | ● |
| Passage | PD97PT10-ATL PD97ES10 | | | ● | ● | ● | ● | ● | ● |
| Entry /Office | PD97PT50 | | | | | | | ● | |
| Entry | PD97PT53-ATL PD97ES53 | | | ● | ● | ● | ● | | |
| Patio/Exit | PD97PT60 PD97PT60-ATL PD97ES60 | | | | | | | ● | ● |
| Classroom | PD97PT70 | | | | | | | | |
| Storeroom | PD97PT80-ATL PD97ES80 | | | | ● | | | | |

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.

Match With Vertical Line Drawn On Door


Template For PD97PT/PD97PT-ATL/PD97ES (2-3/4" Backset) Mortise Locks with XGT/XGS Lever or Surface Pull Trim for Emergency Egress lock

Case Size: 3-21/32" x 6-1/2" x 11/16" (93mm x 166mm x 17mm)

Backset: 2-3/4" (70mm)

Lock Front: 1" x 8" x 15/64" (25.4mm x 203mm x 6mm)

Cylinder to Thumb Turn: 1-3/16" (30mm)

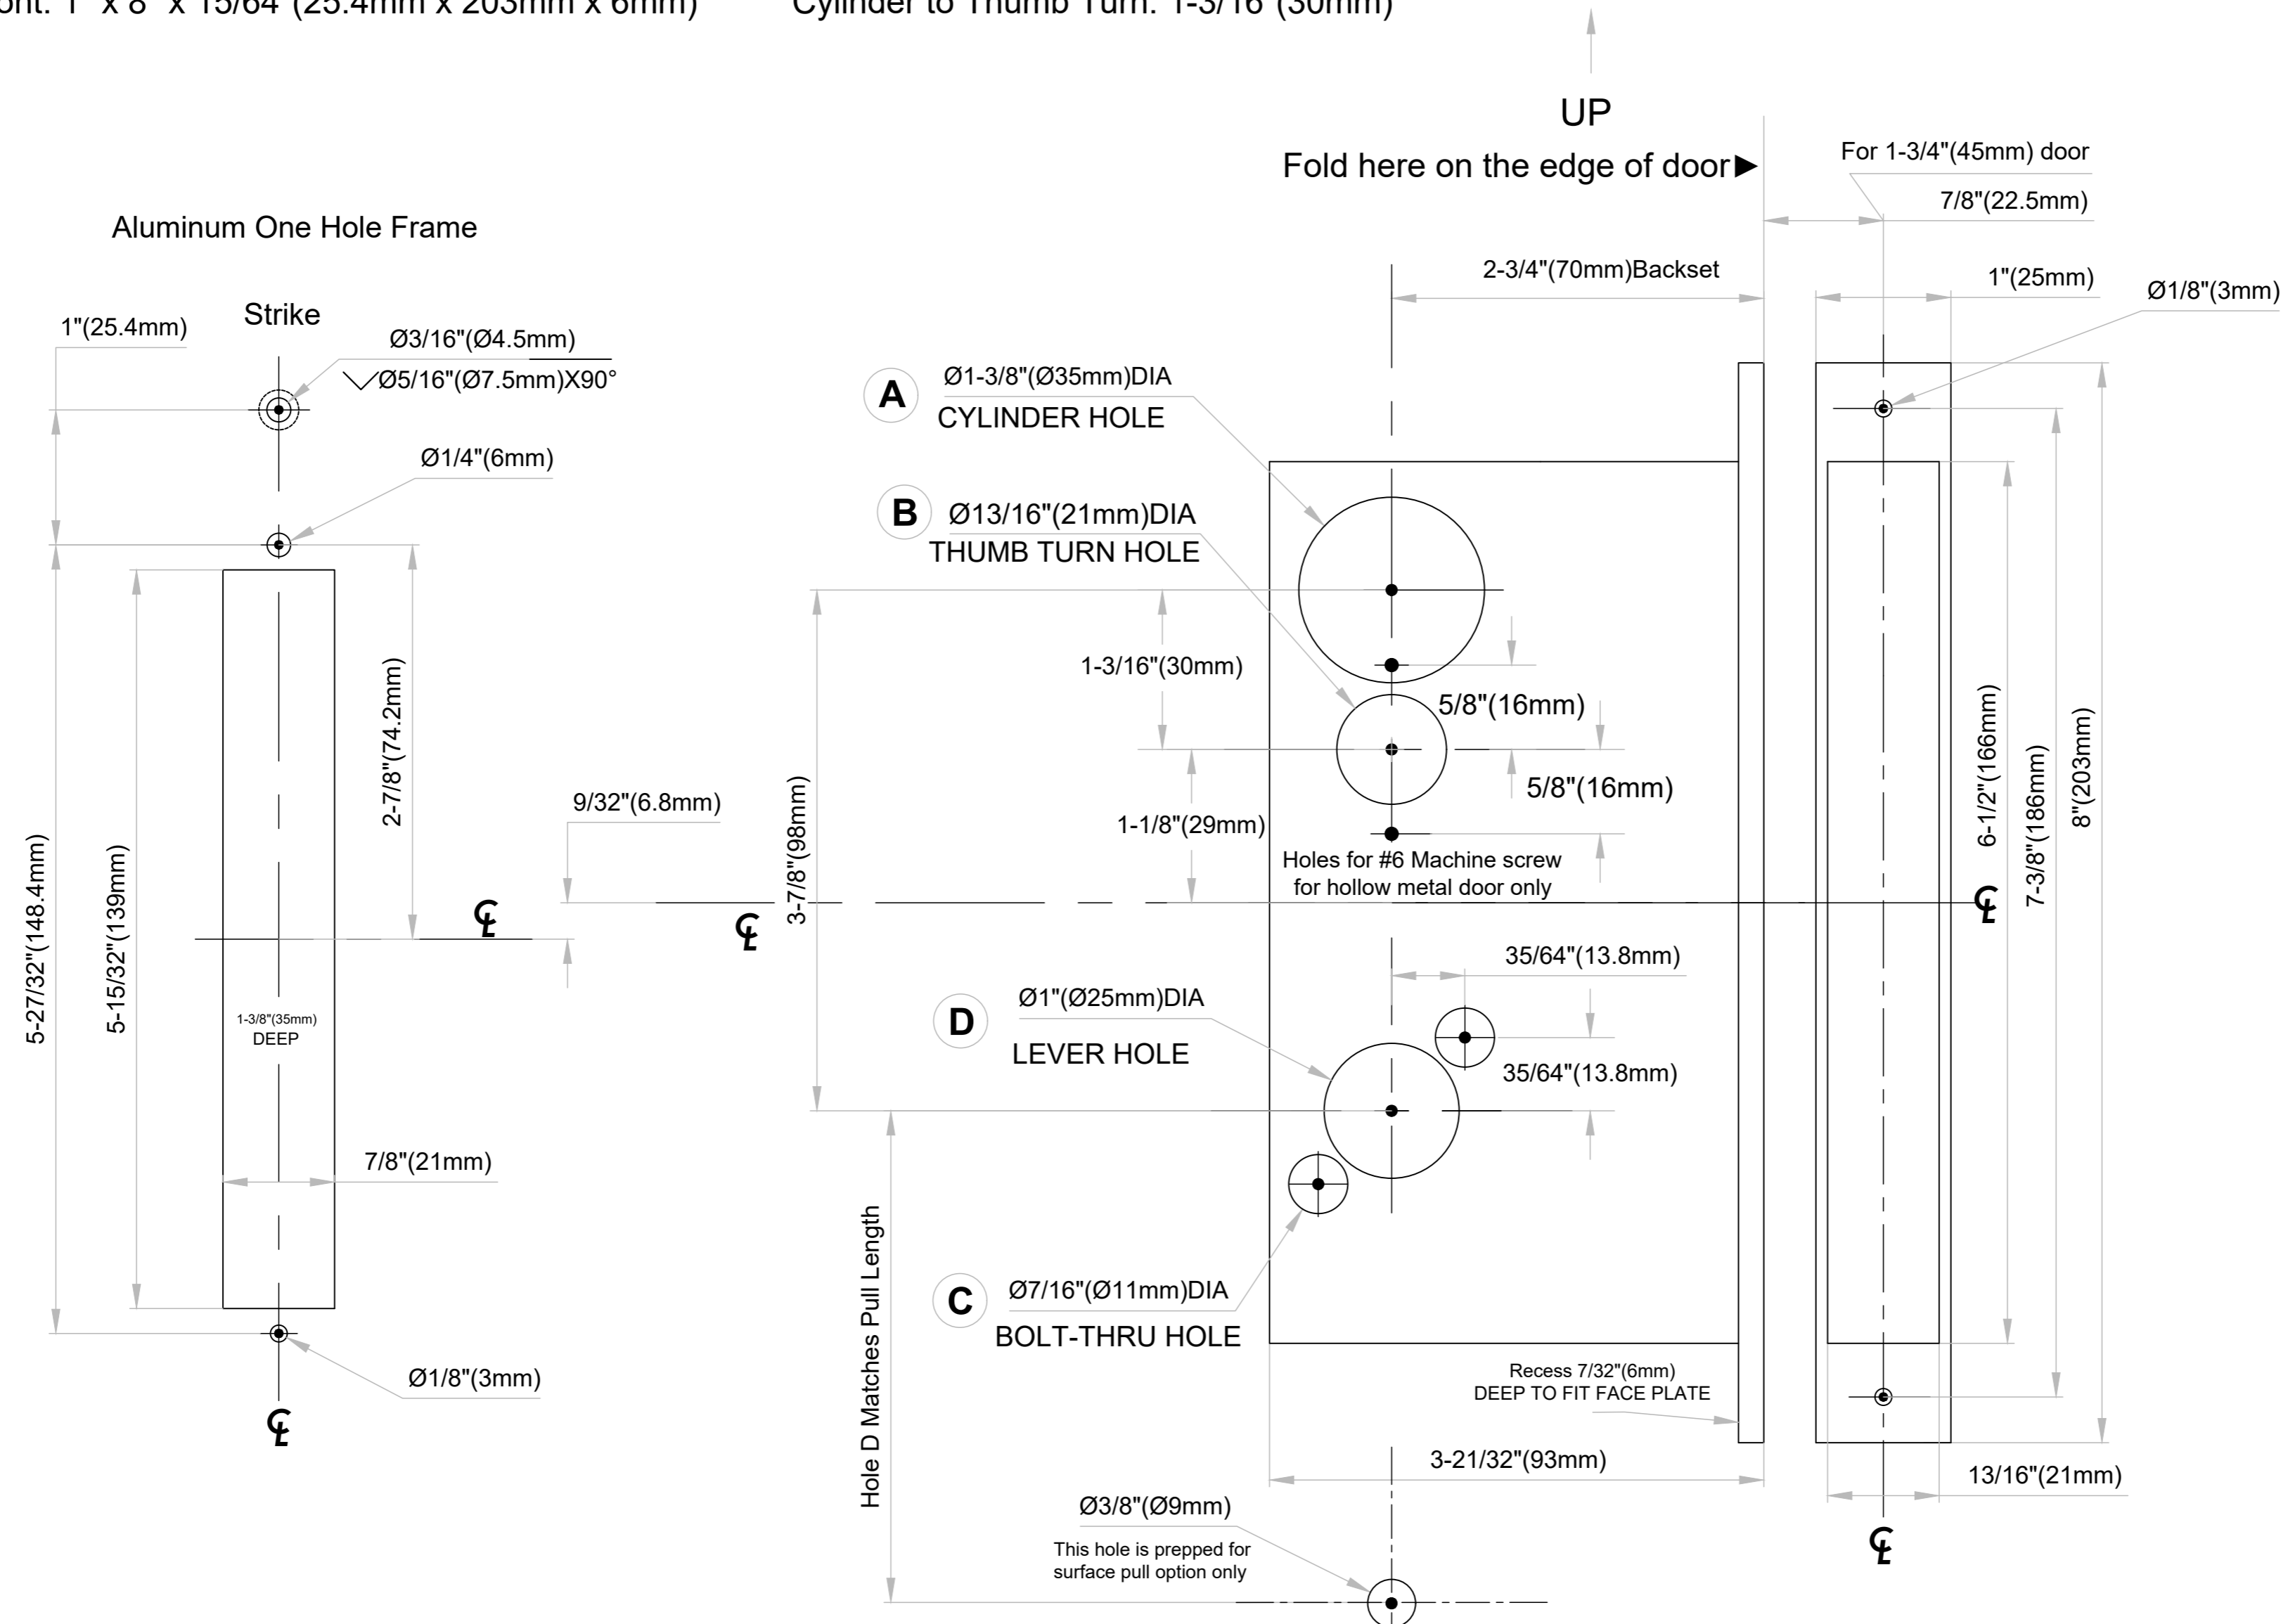

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.

Match With Vertical Line Drawn On Door