


Template for BPMU Trim (Lever High)

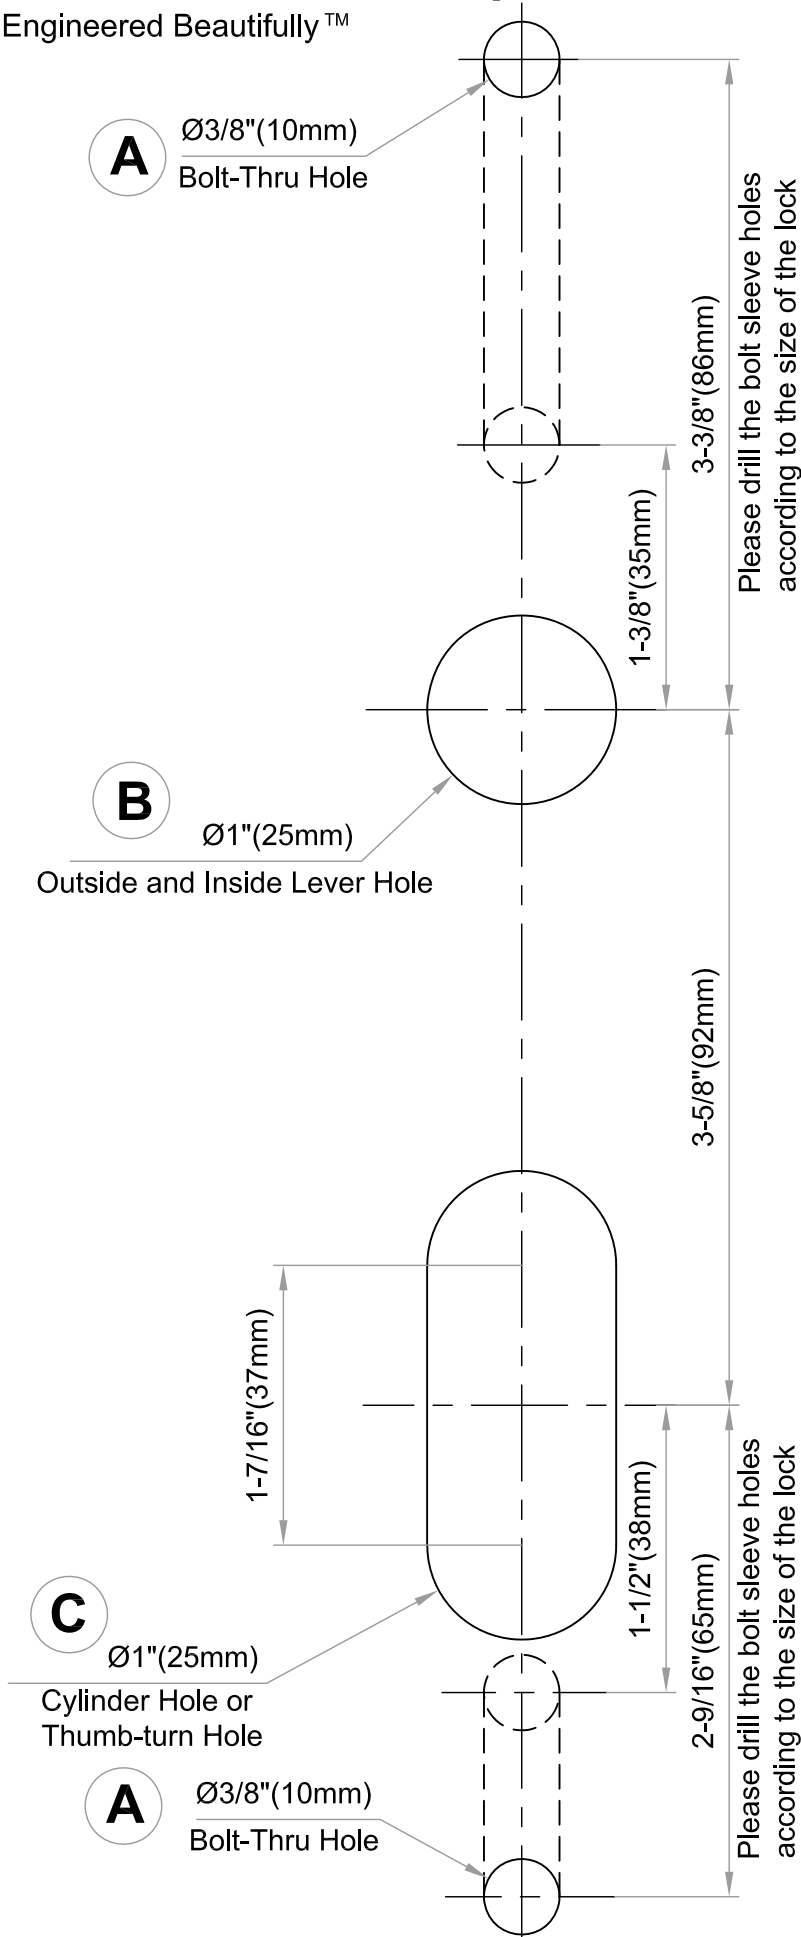

Door preparation using template supplied.

***Make sure the correct lock function, Entry or Privacy or Passage and Drill the necessary holes only.

Function	Outside			Inside		
	A	B	C	A	B	C
Passage	●	●		●	●	
Half Passage/Half Dummy	●	●		●	●	
Full Dummy	●			●		
Patio	●	●		●		●
Entry	●	●	●	●	●	●

Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.