


Template for BPMU Trim (Lever Low)

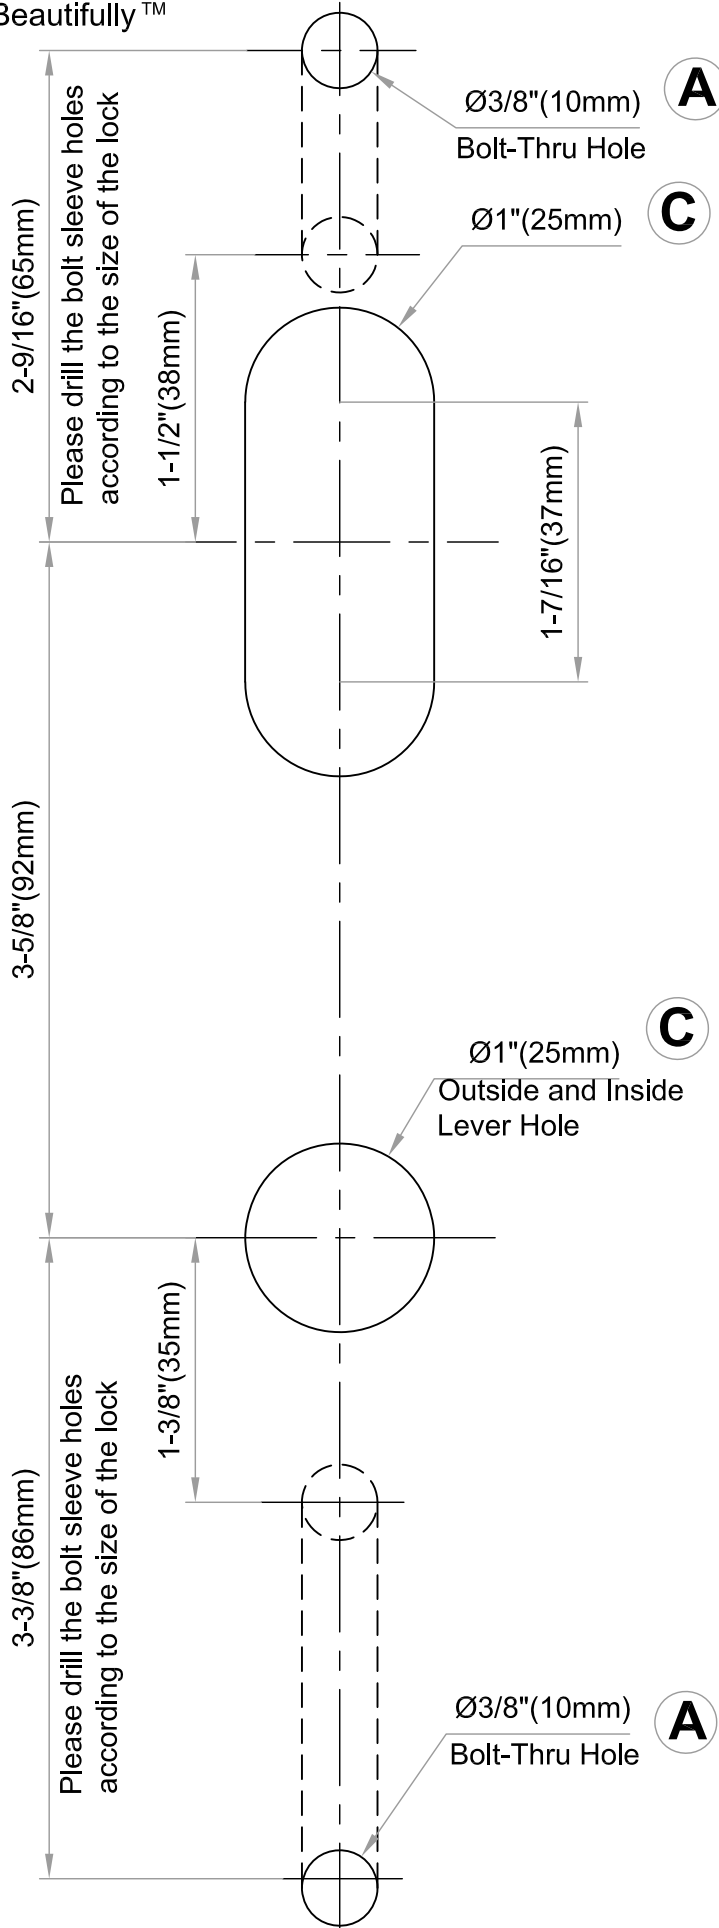

Door preparation using template supplied.

***Make sure the correct lock function, Entry or Privacy or Passage and Drill the necessary holes only.

| Function | Outside | | | Inside | | |
|-------------------------|---------|---|---|--------|---|---|
| | A | B | C | A | B | C |
| Passage | ● | ● | | ● | ● | |
| Half Passage/Half Dummy | ● | ● | | ● | ● | |
| Full Dummy | ● | | | ● | | |
| Patio | ● | ● | | ● | ● | ● |
| Entry | ● | ● | ● | ● | ● | ● |

Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.