


Template For PD96 (2-1/2" Backset) Self-latching / Self-locking Mortise Locks with XRA/XSE Lever Trim for Emergency Egress lock

Case Size: 3-3/8" x 6" x 11/16"(86mm x 152mm x 17mm)

Backset: 2-1/2"(63.5mm)

Lock Front: 1" x 8" x 7/32"(25.4mm x 203mm x 5.6mm)

Cylinder to Thumb Turn: 1-3/16"(30mm)

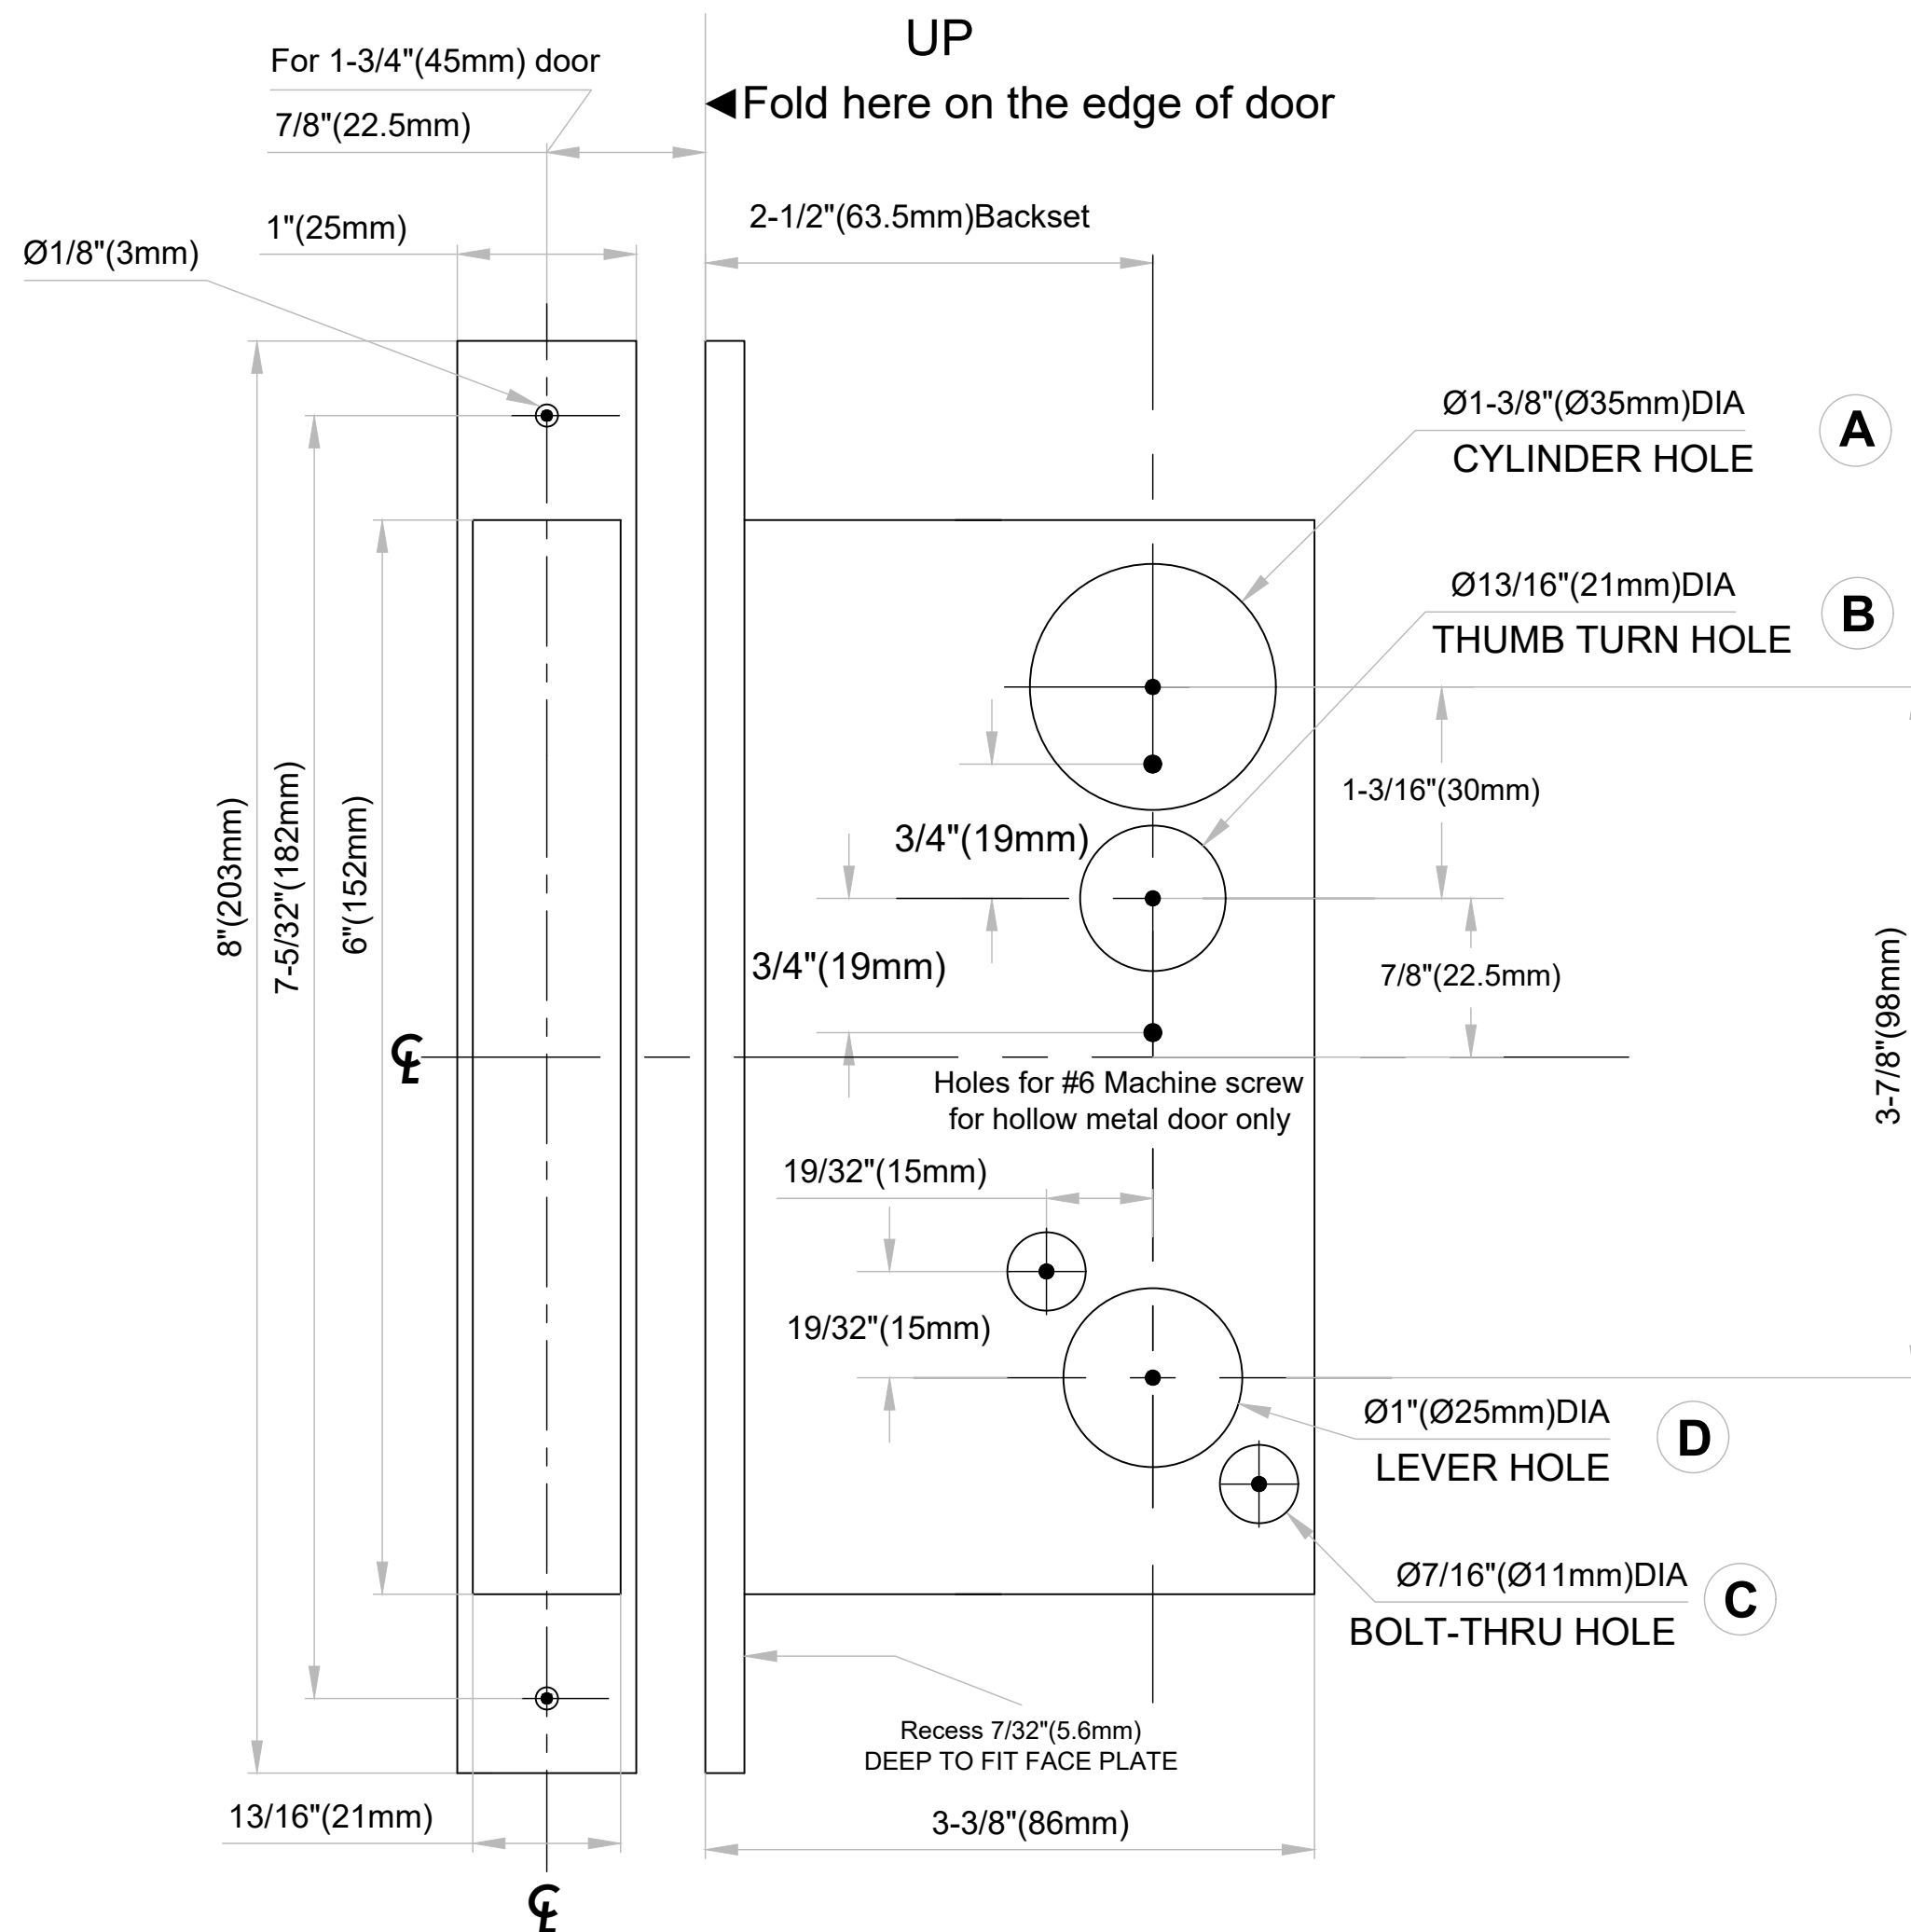

Door preparation using template supplied.

Please read the Installation Instruction Carefully before drilling any holes on the door.
Choose the correct holes to drill for the corresponding functions.

Lever by Lever	Outside Holes				Inside Holes					
	A	B	C	D	A	B	C	D		
Function										
Passage	•		•	•	•		•	•		
Privacy		•	•	•		•	•	•		
Office Entry	•		•	•		•	•	•		
Entrance	•		•	•		•	•	•		
Patio			•	•		•	•	•		
Classroom			•	•		•	•	•		
Storeroom			•	•		•	•	•		
Exit										
Communicating								•		
Security Communicating								•		
Item Ref.	...PD9610...	...PD9640...	...PD9650...	...PD9653...	...PD9660...	...PD9670...	...PD9680...	...PD9690...	...PD9692...	...PD9695...

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Match With Vertical Line Drawn On Door

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.


Template For PD96 (2-1/2" Backset) Self-latching / Self-locking Mortise Locks with XRA/XSE Lever Trim for Emergency Egress lock

Case Size: 3-3/8" x 6" x 11/16"(86mm x 152mm x 17mm)

Backset: 2-1/2"(63.5mm)

Lock Front: 1" x 8" x 7/32"(25.4mm x 203mm x 5.6mm)

Cylinder to Thumb Turn: 1-3/16"(30mm)

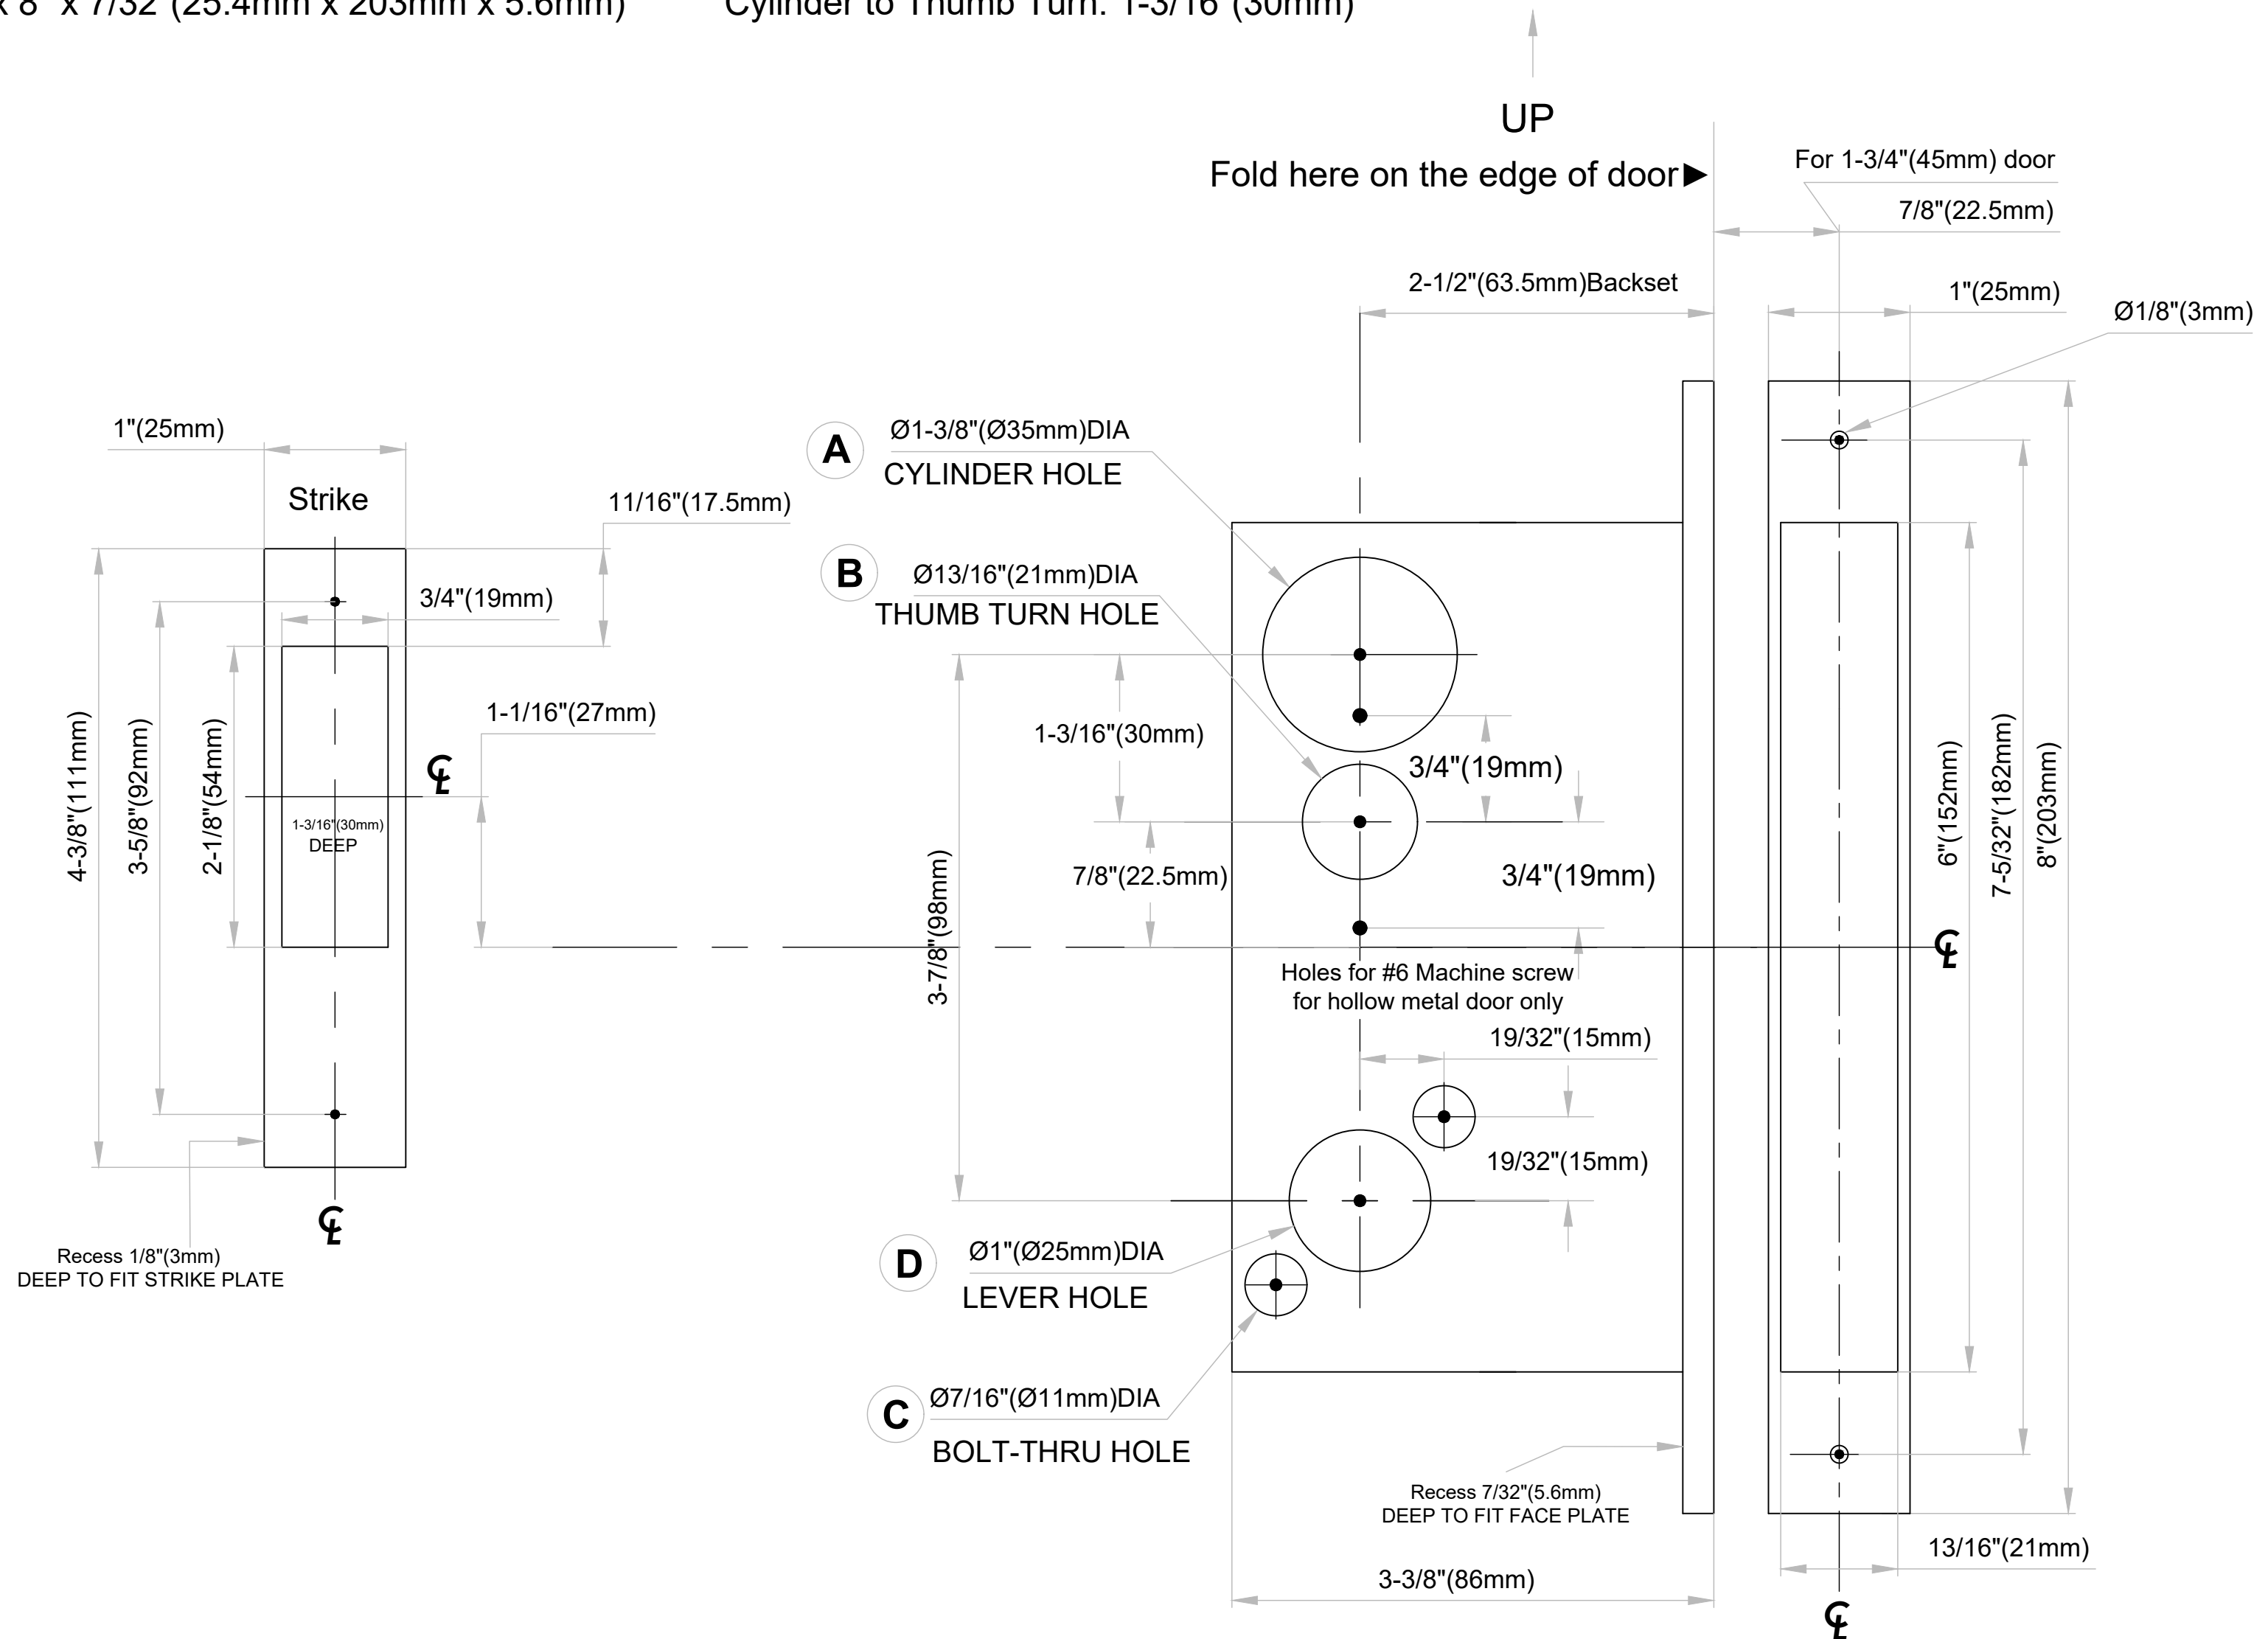

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Match With Vertical Line Drawn On Door

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.