




Template For PD97PT/PD97ATL/PD97ES (2-3/4" Backset) Mortise Locks with XGT/XGS Lever or Surface Pull Trim for Emergency Egress lock

Case Size: 3-21/32" x 6-1/2" x 11/16"(93mm x 166mm x 17mm)

Backset: 2-3/4"(70mm)

Lock Front: 1" x 8" x 7/32"(25.4mm x 203mm x 5.6mm)

Cylinder to Thumb Turn: 1-3/16"(30mm)

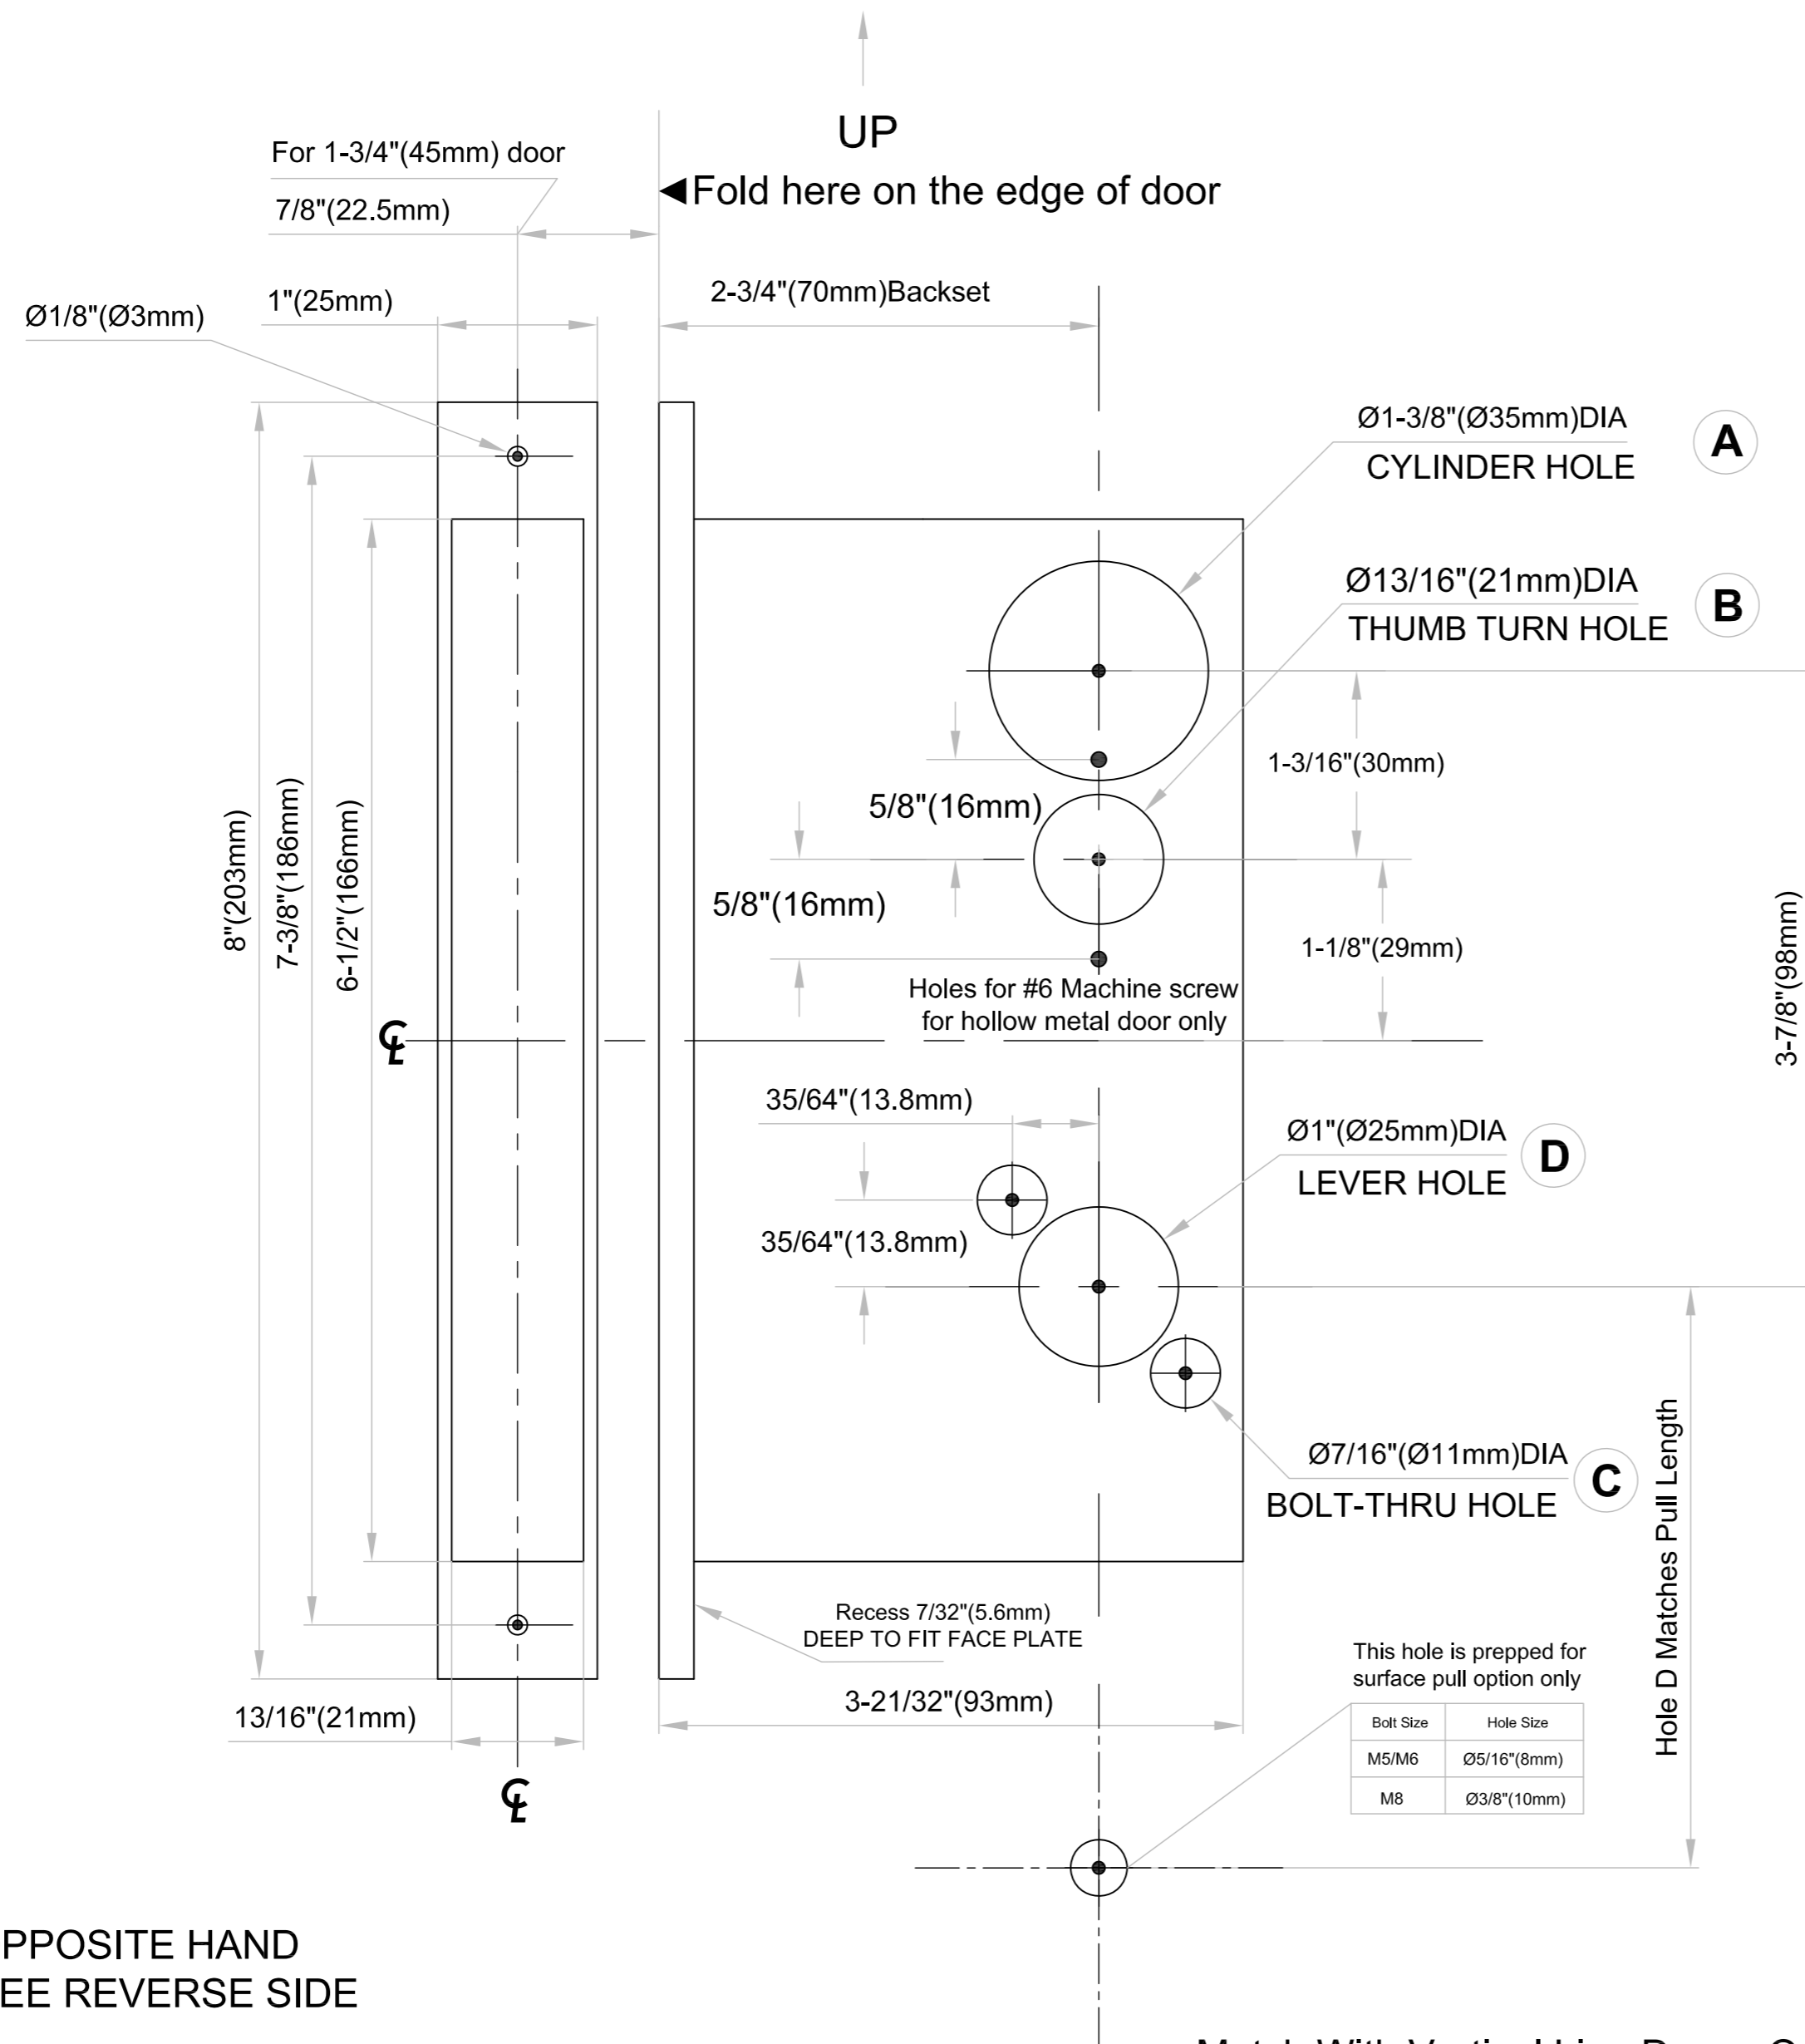

Door preparation using template supplied.

Please read the Installation Instruction Carefully before drilling any holes on the door. Choose the correct holes to drill for the corresponding functions.

Function	Item Ref.	Outside Holes				Inside Holes						
		A	B	C	D	A	B	C	D			
Privacy	PD97PT40		●	●	●	●	●	●	●	●	●	●
Passage	PD97ATL10			●	●	●						
Entry /Office	PD97PT50			●	●	●						
	PD97ATL53 PD97ES53	●										●
Patio/Exit	PD97PT60											
	PD97ATL60 PD97ES60					●						
Classroom	PD97PT70											
Storeroom	PD97ATL80											
	PD97ES80											
Security Communicating	PD97PT95											
	PD97ATL95 PD97ES95											

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers, weather stripping, sound proofing or other additions to door or door frames.

Match With Vertical Line Drawn On Door


Template For PD97PT/PD97ATL/PD97ES (2-3/4" Backset) Mortise Locks with XGT/XGS Lever or Surface Pull Trim for Emergency Egress lock

Case Size: 3-21/32" x 6-1/2" x 11/16" (93mm x 166mm x 17mm)

Backset: 2-3/4" (70mm)

Lock Front: 1" x 8" x 7/32" (25.4mm x 203mm x 5.6mm)

Cylinder to Thumb Turn: 1-3/16" (30mm)

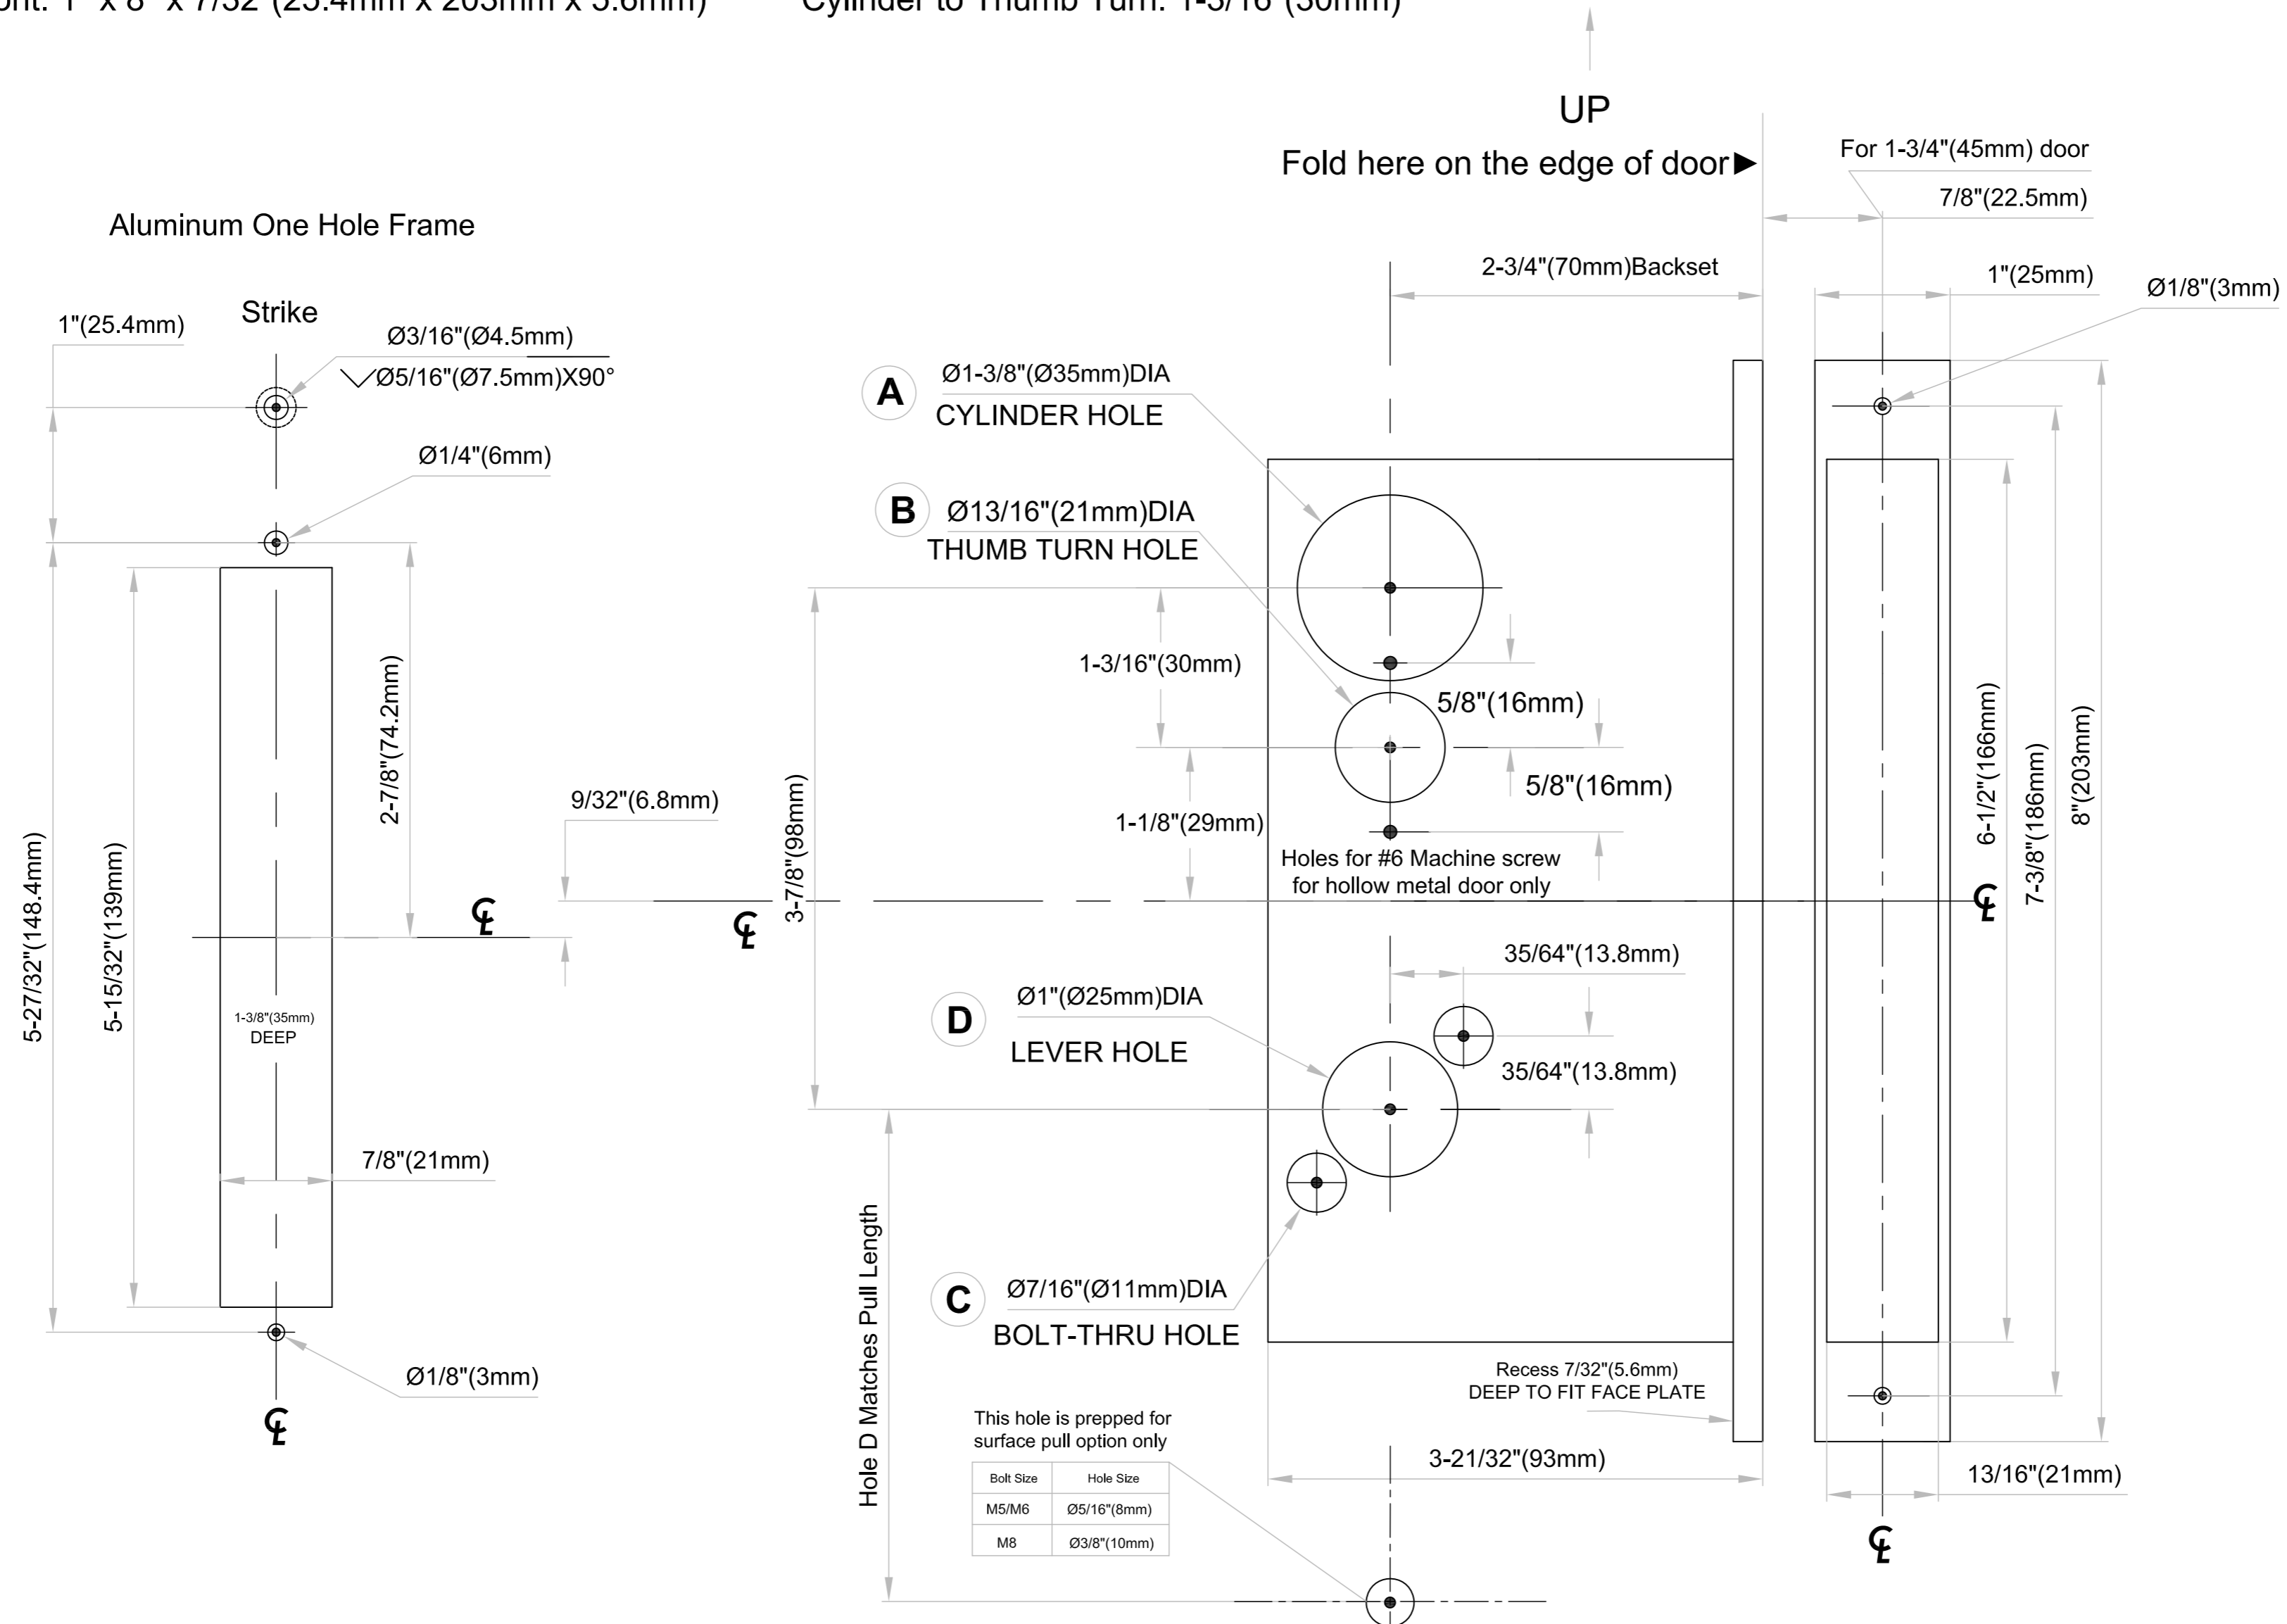

FOR OPPOSITE HAND
PLEASE SEE REVERSE SIDE

Dimensions do not provide allowances for door silencers,
weather stripping, sound proofing or other additions to door or door frames.